

avenlur

Cherry by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM

WARNING

Adult assembly required.

WARNING

Maximum user weight: 110 lbs (50kg) per child.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY. SAVE THIS SHEET FOR FUTURE REFERENCE.

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.
2. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment (examples: ropes, clothesline, pet leashes, cables and chain, etc) as they may cause a strangulation hazard or any other hazard.
3. Never allow children to use the equipment in a manner other than intended.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:

1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

CONTACT US BEFORE ASSEMBLY IF:

- You need assistance with assembly
- You need a replacement part due to a missing part or defective part

Call us at 888-697-3931 M-F 9AM-5PM PT

or email us at info@avenlur.com



① x1 45.1in



② x1 45.1in



③ x1 45.1in



④ x1 45.1in




⑤ x2 45.1in



⑥ x1 38in



⑦ x1 38in




⑧ x1 41.1in



⑨ x1 41.1in



⑩ x6 18.5in



⑪ x2 15.7in




⑫ x2 22.6in




⑬ x1 22.6in




⑭ x2 24.2in

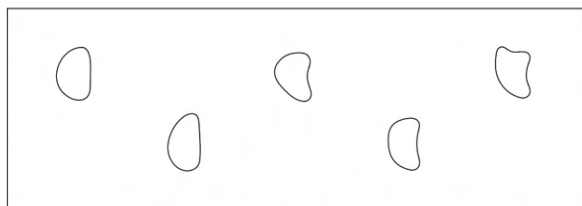


⑮ x1 44.6in

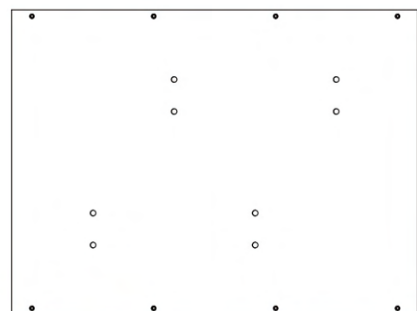


⑯ x1 31.5in




⑰ x1 50.4in

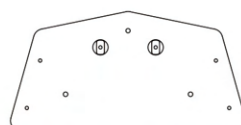


⑱ x1 18.2in




⑲ x1 50.4in

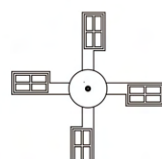


⑳ x1 11.8in

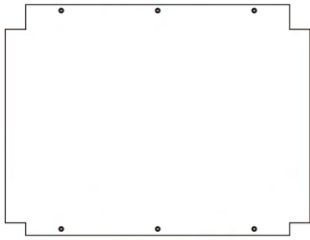


21 x1 23.6in

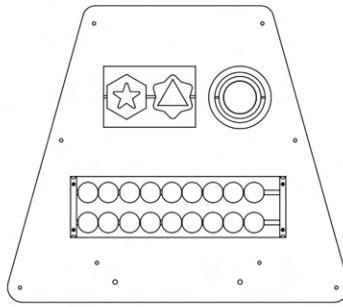


22 x1 26.4in

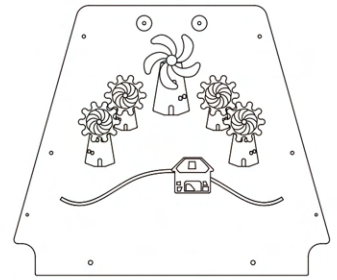

23 x1 24.5in

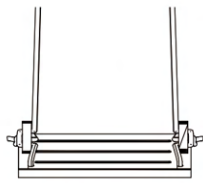

24 x1

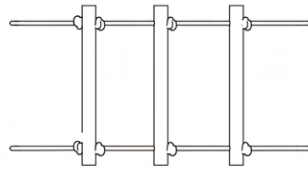

25 x1



26 x4



27 x1 145.6in



28 x1 102.3in



29 x1 78.7in



M6.3x40
A x36



M3x14
B x3



M4x20
C x2



M4x40
D x14



M5x30
E x2



M6x30 M6x20
F x18




M6x40 M6x20
G x4



M10x35
H x8




I x1

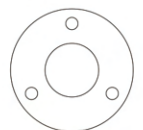


J x1




K x1



4mm
L x2




17mm
M x1




8mm
N x1

01-1

Note: Pay attention to all the black bubbled section markers. The manual may refer back to those later.

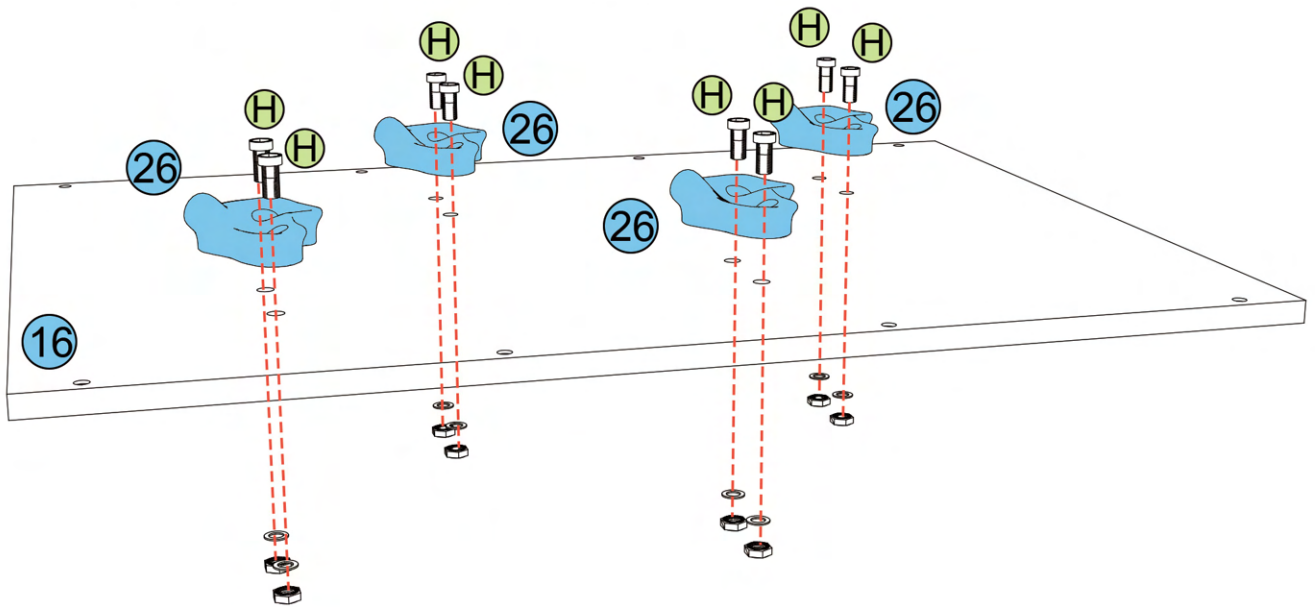



H		8
M		1
N		1

Note: These are locking nuts, and are known for being stubborn. Make sure the rubber part of the nut is facing outward, it takes effort to get past it. WD-40 can help.



01-2

Note: Make sure screw head indent (countersink) of **16** (the board) is facing upward.

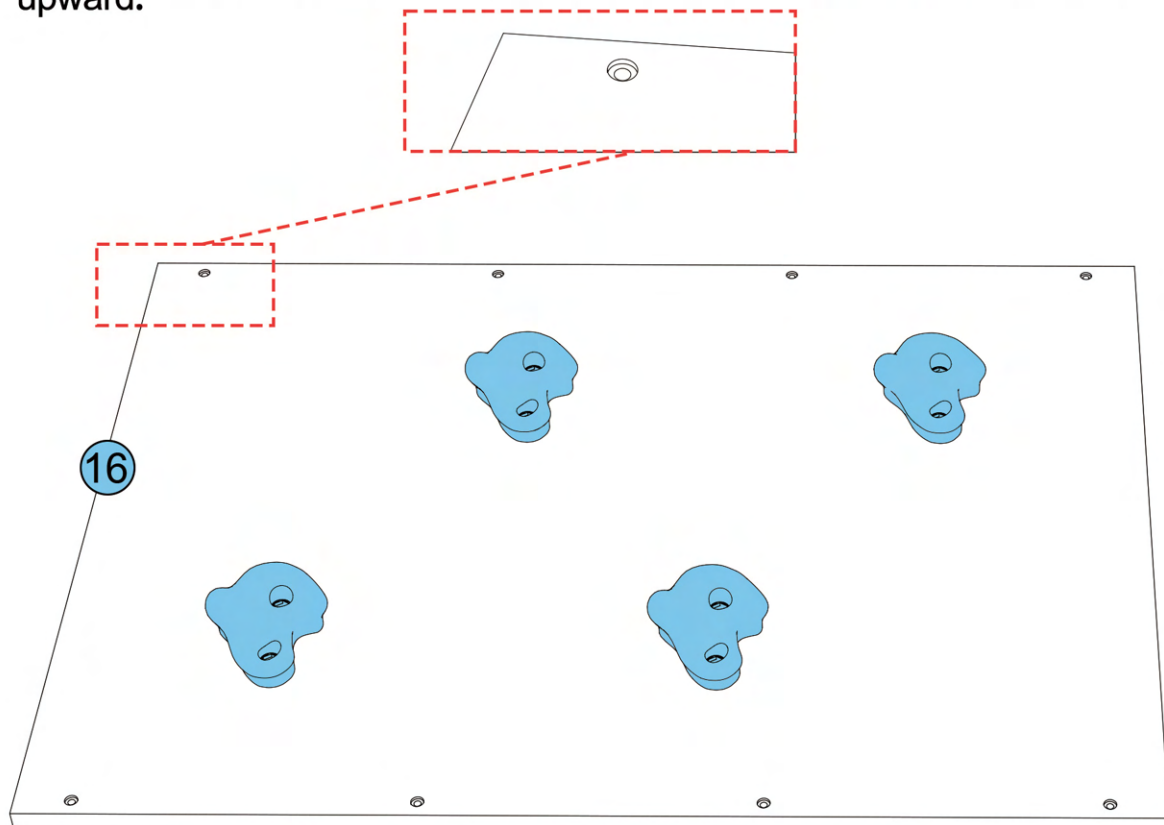

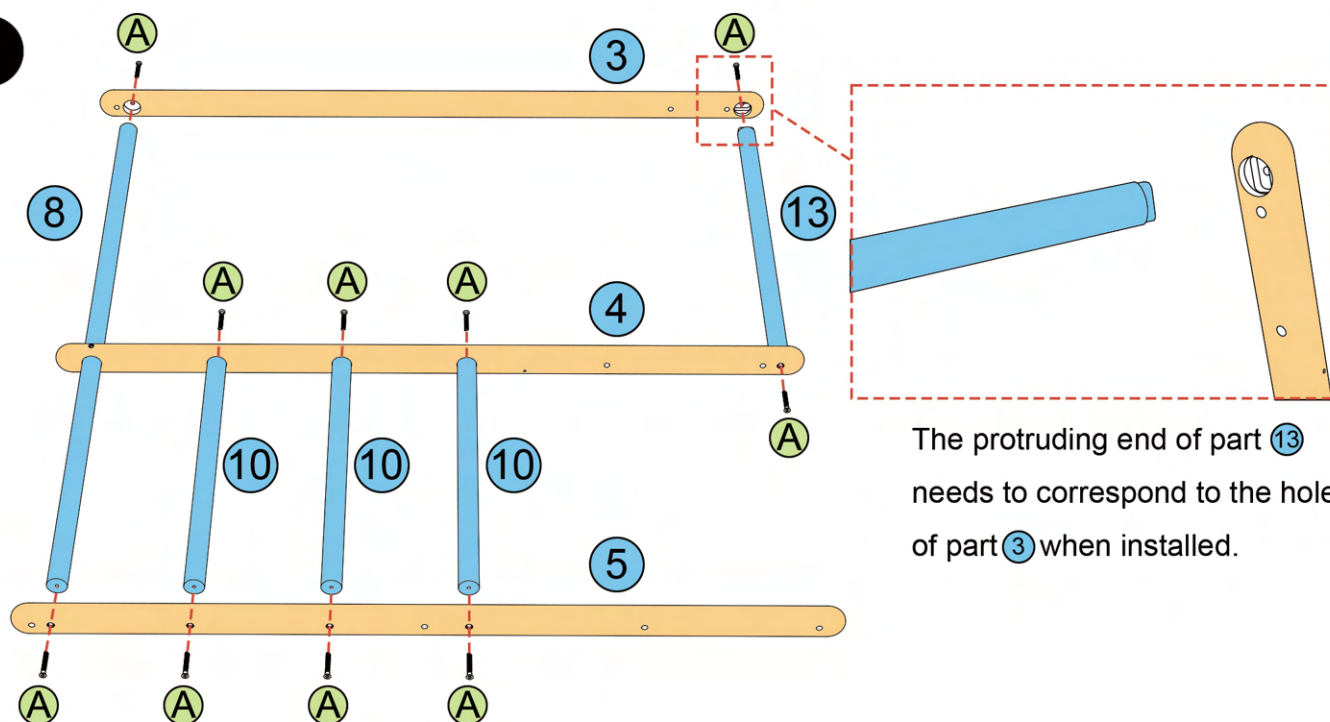




Screw in (C) screw, only after you have already tightened all the (A) screws.

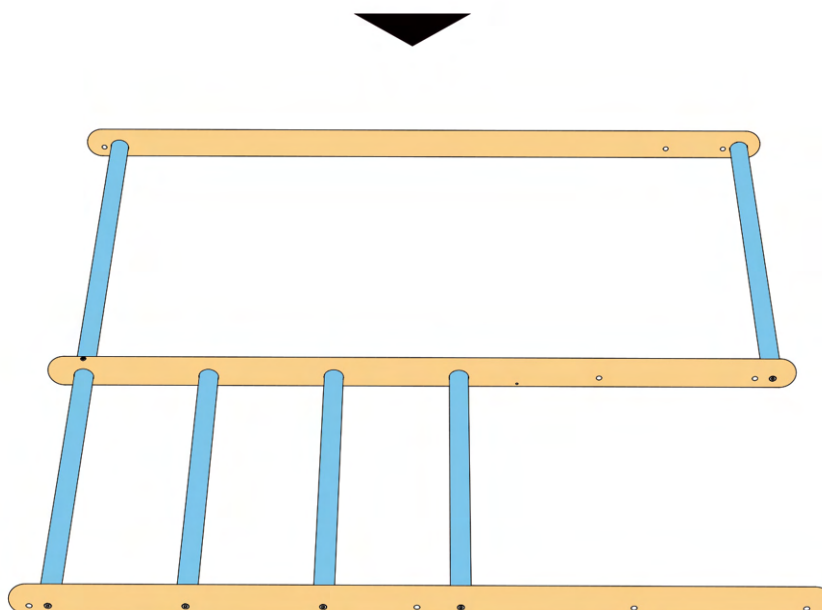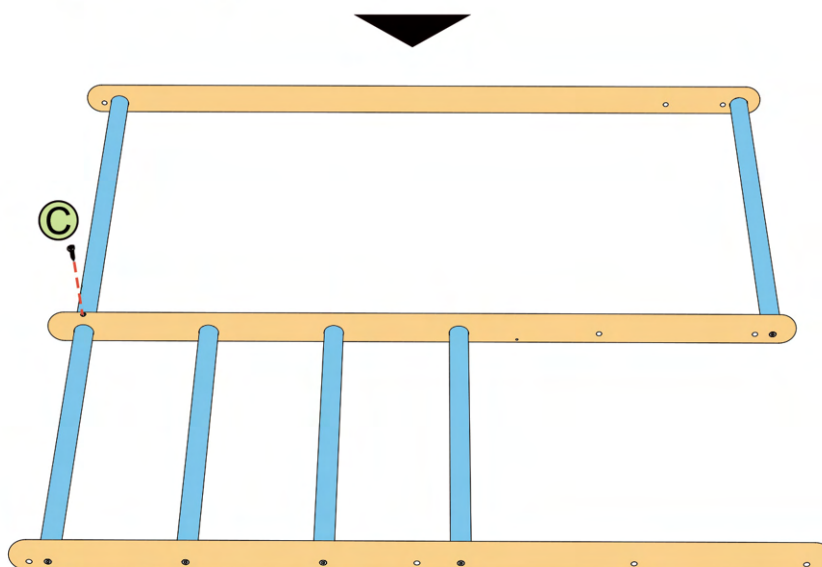


(A)		10
(C)		1
(L)		1


03-1

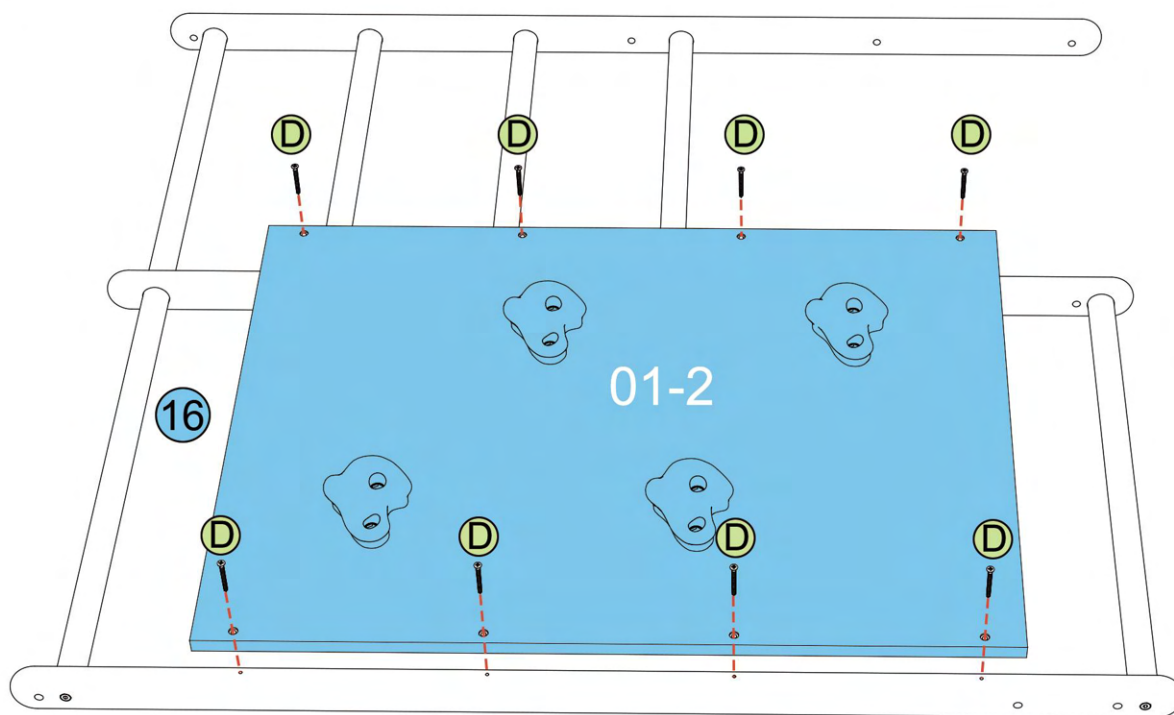



D		8
L		1
	M4x40	
	4mm	

03-2



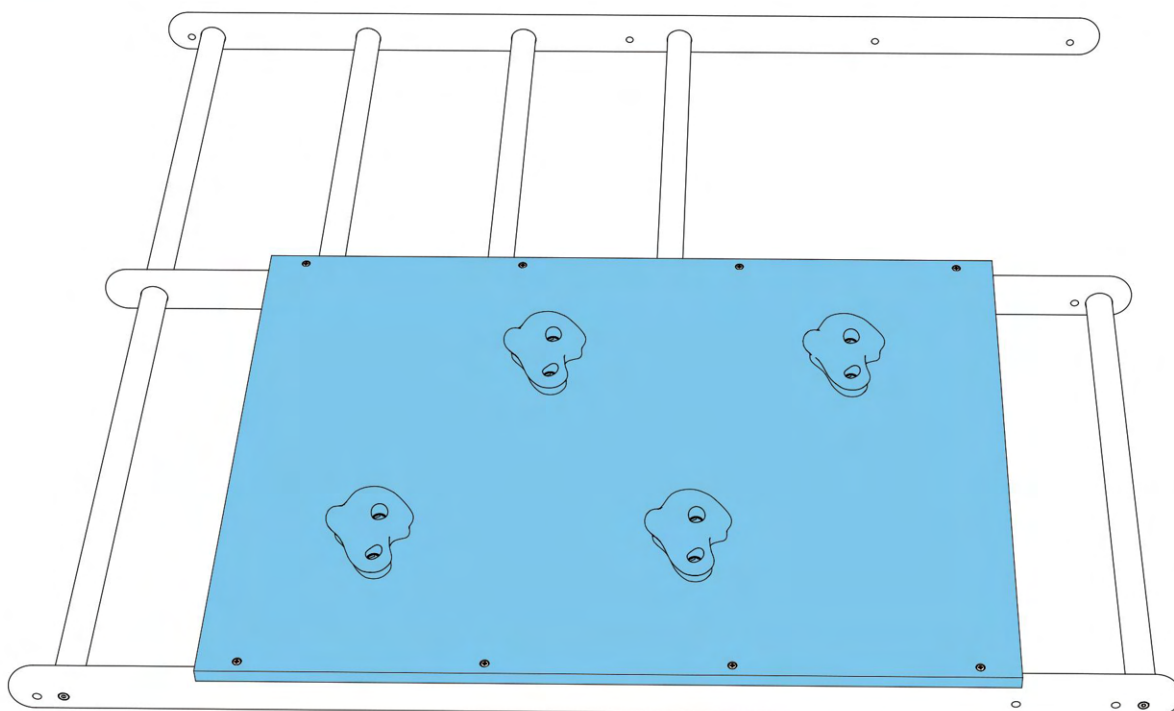


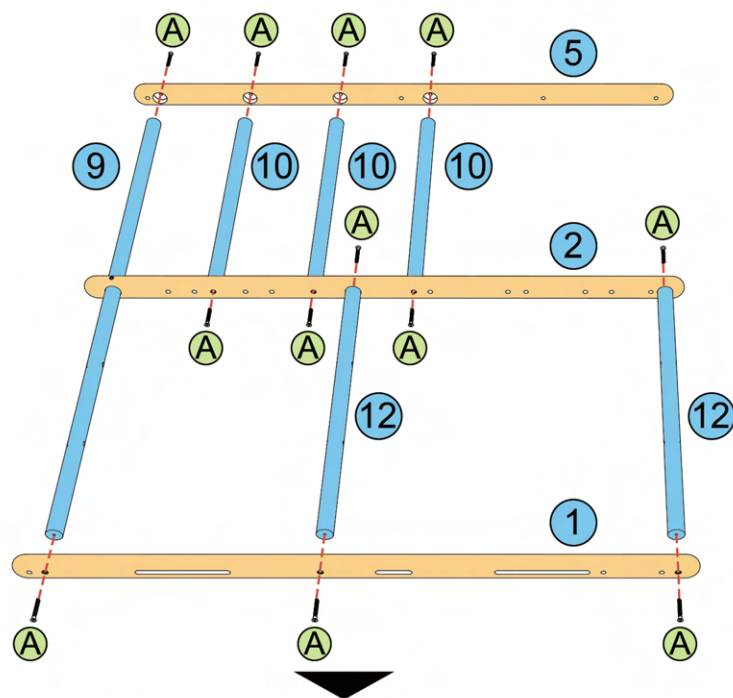





After all **A** screws
are very tight, then
insert **C** screw

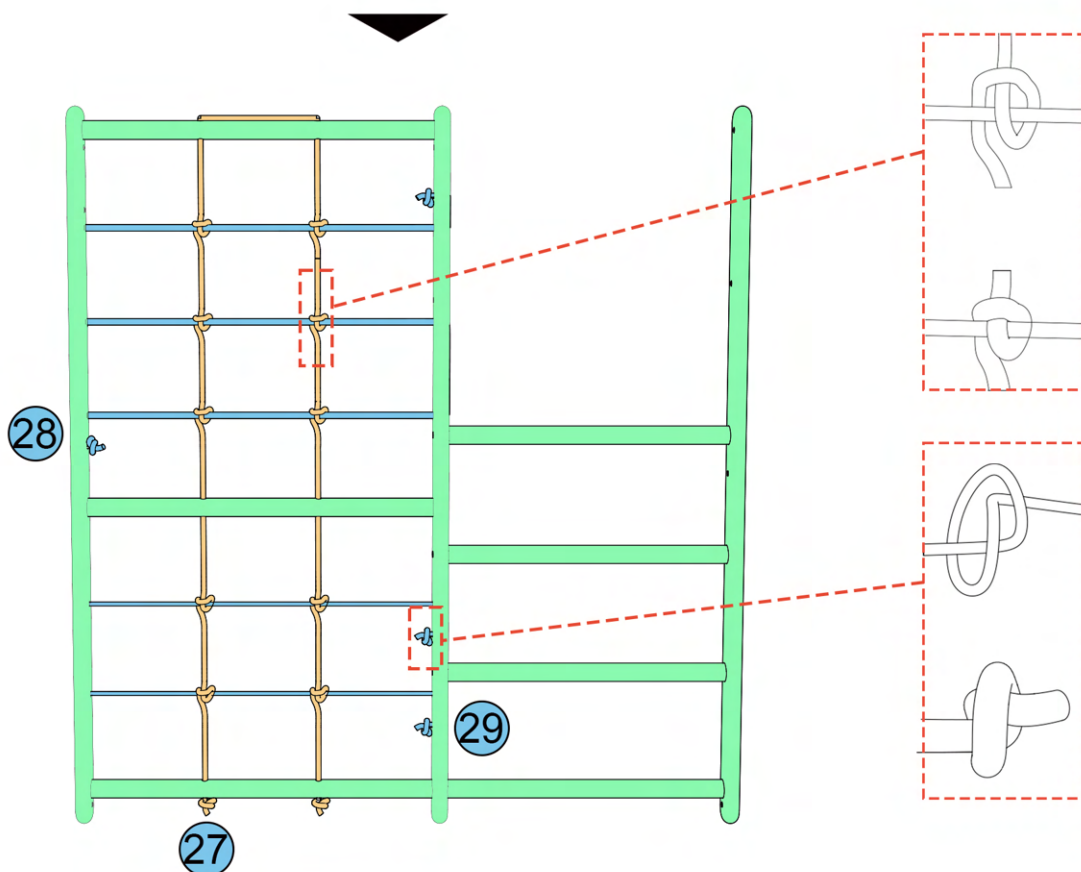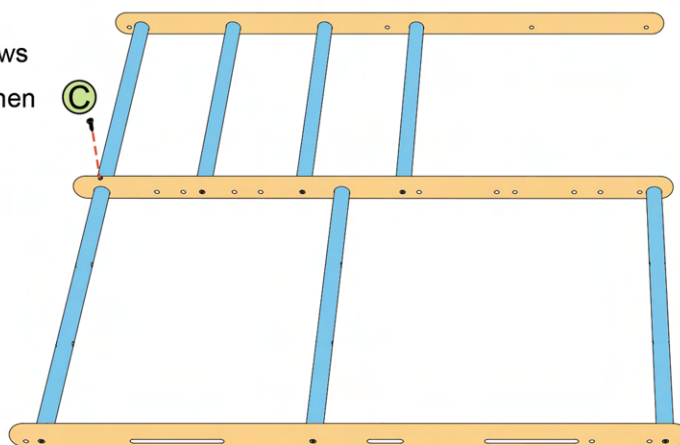

A		12
C		1
L		1

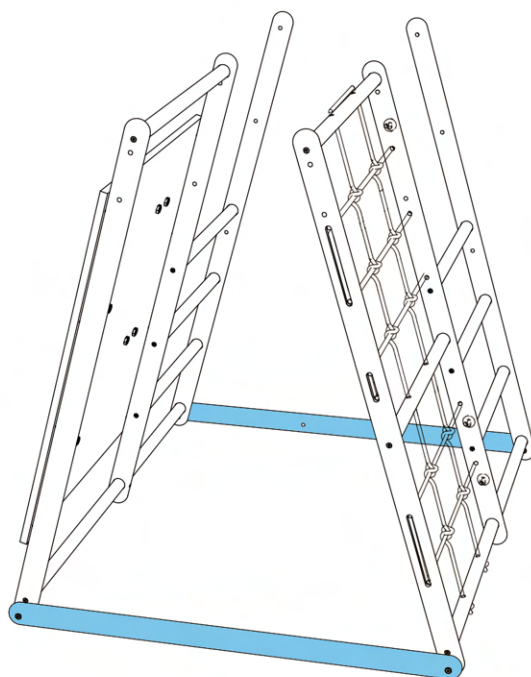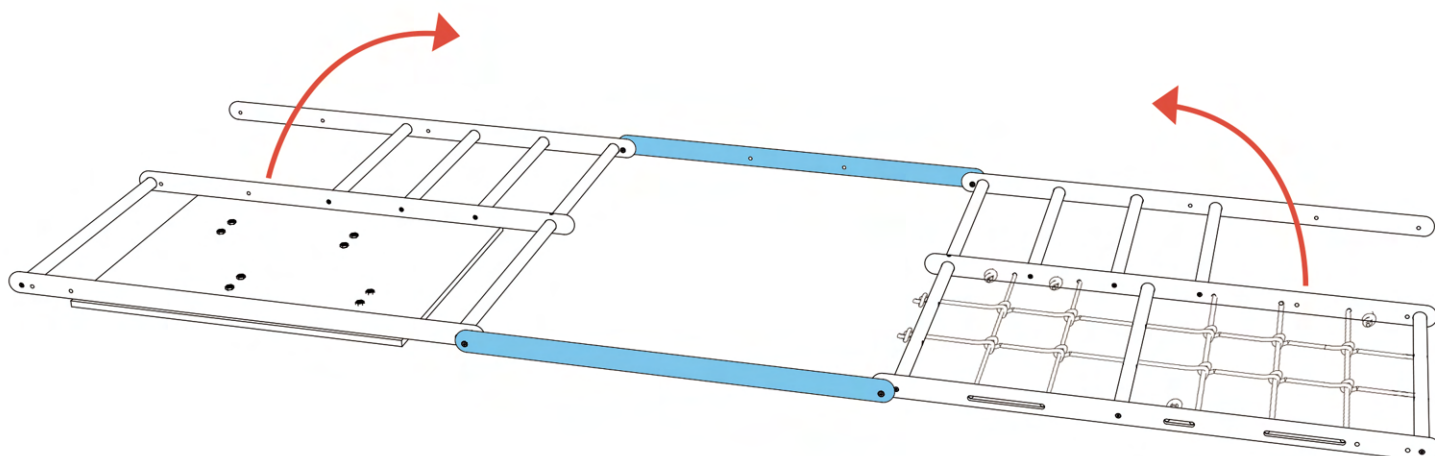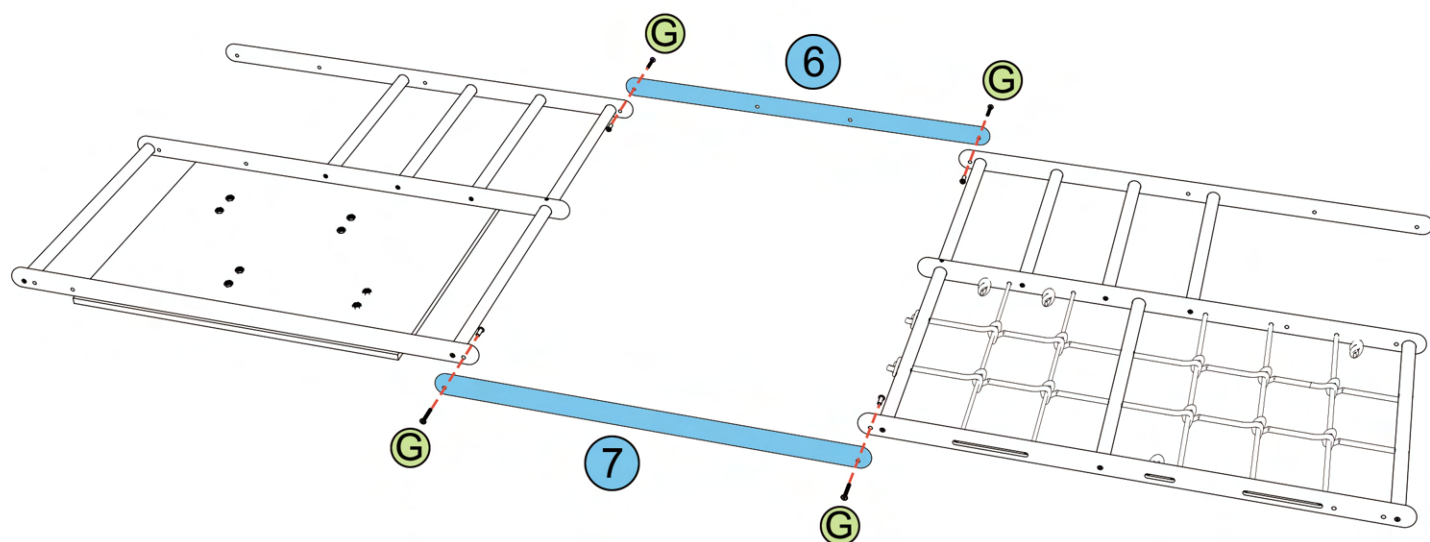


G	 	4
L		2

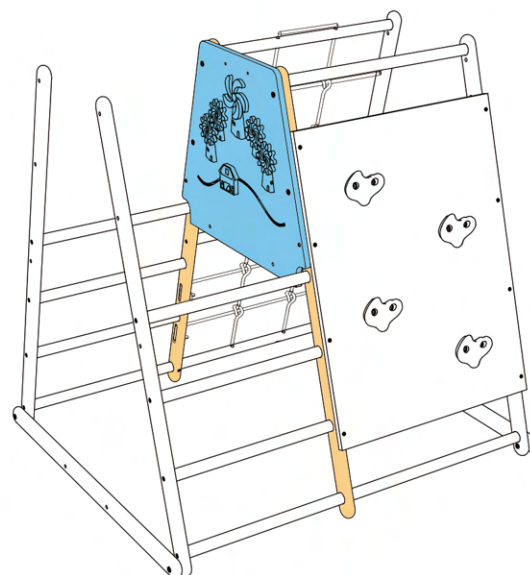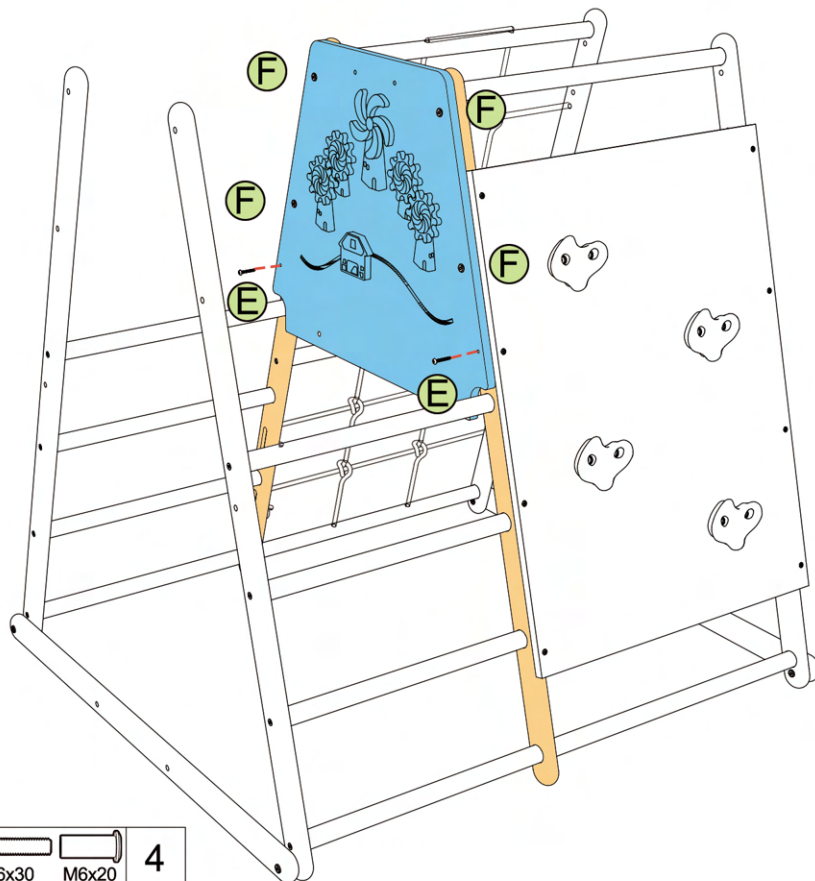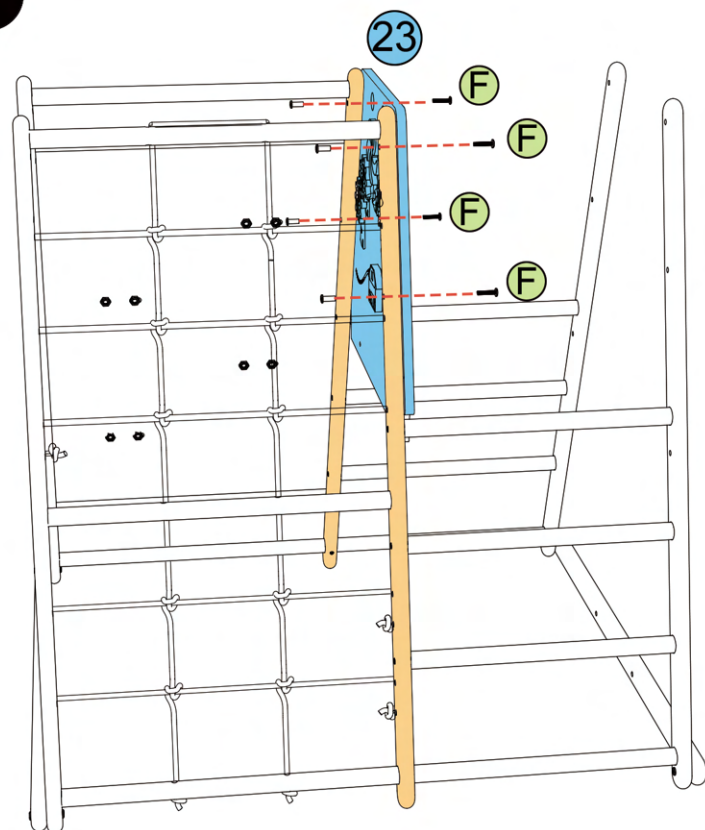




F	 	4
E		2
L		2

07-1

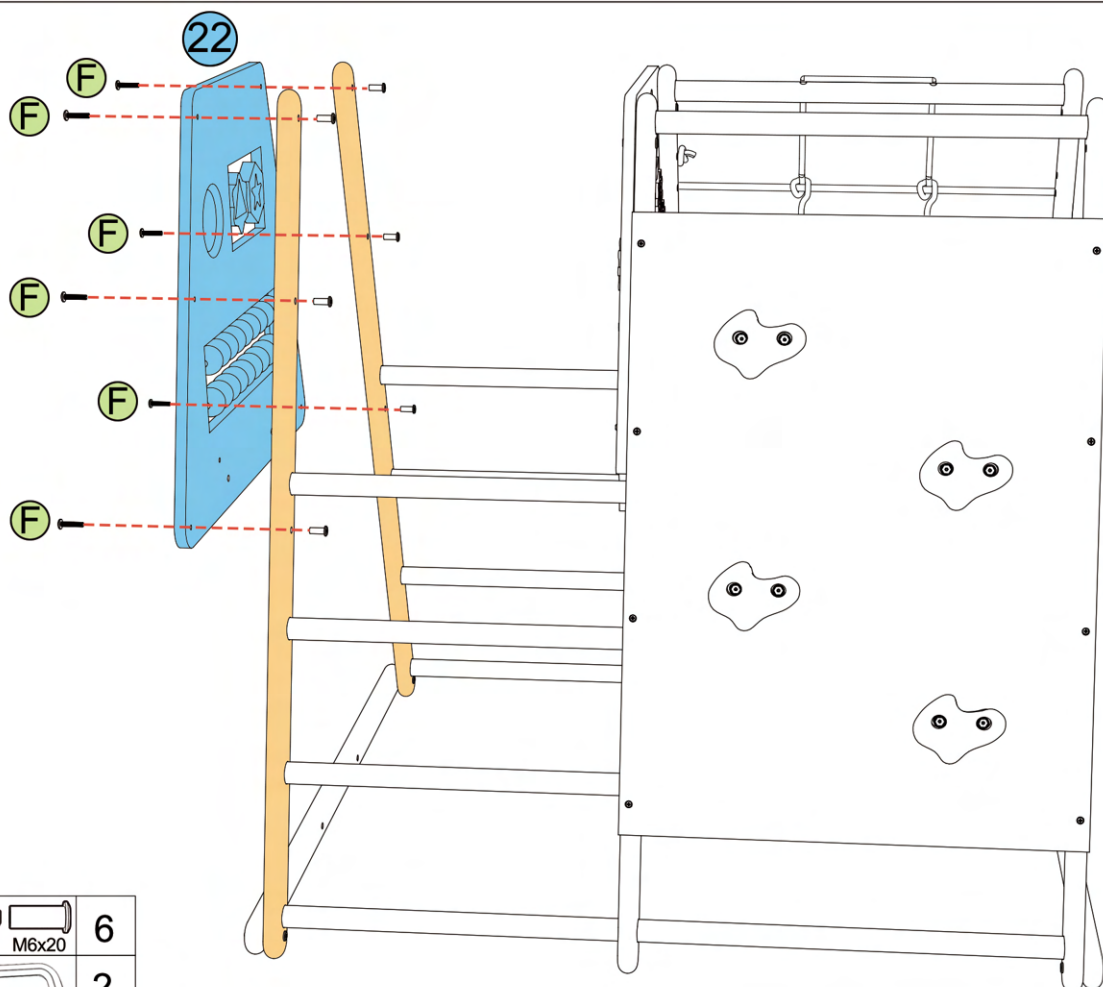




07-2

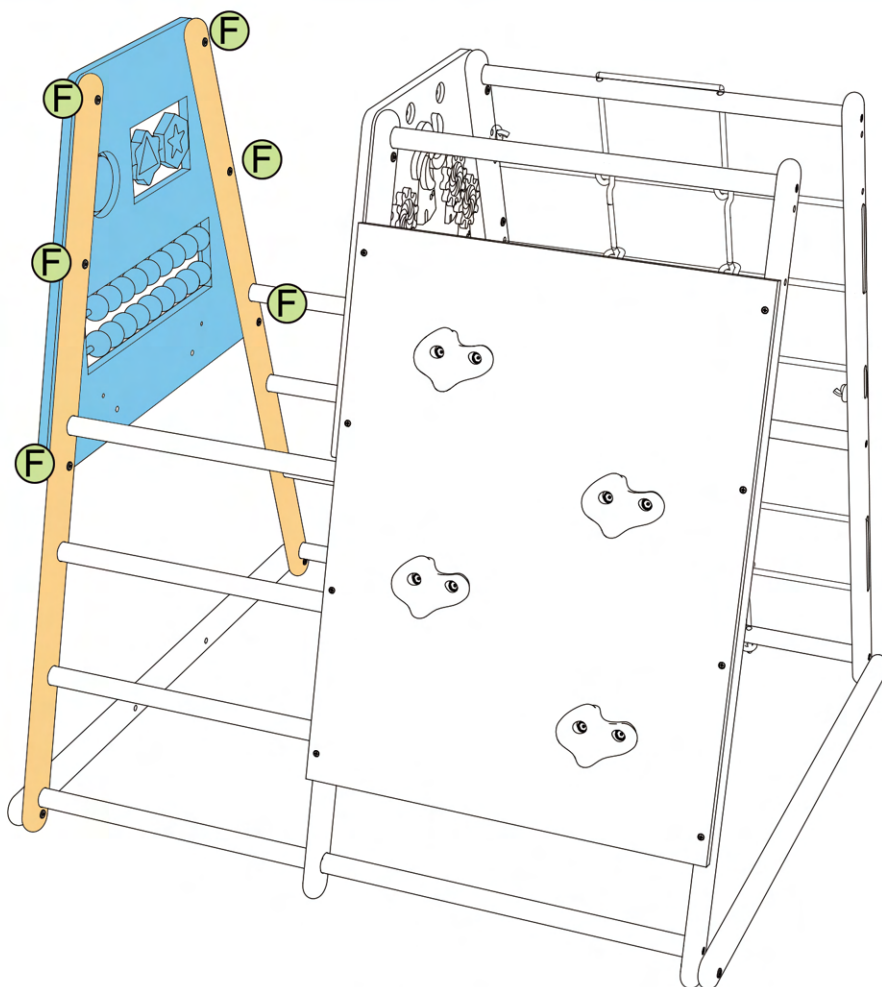

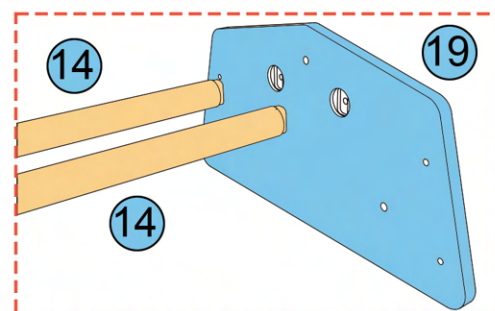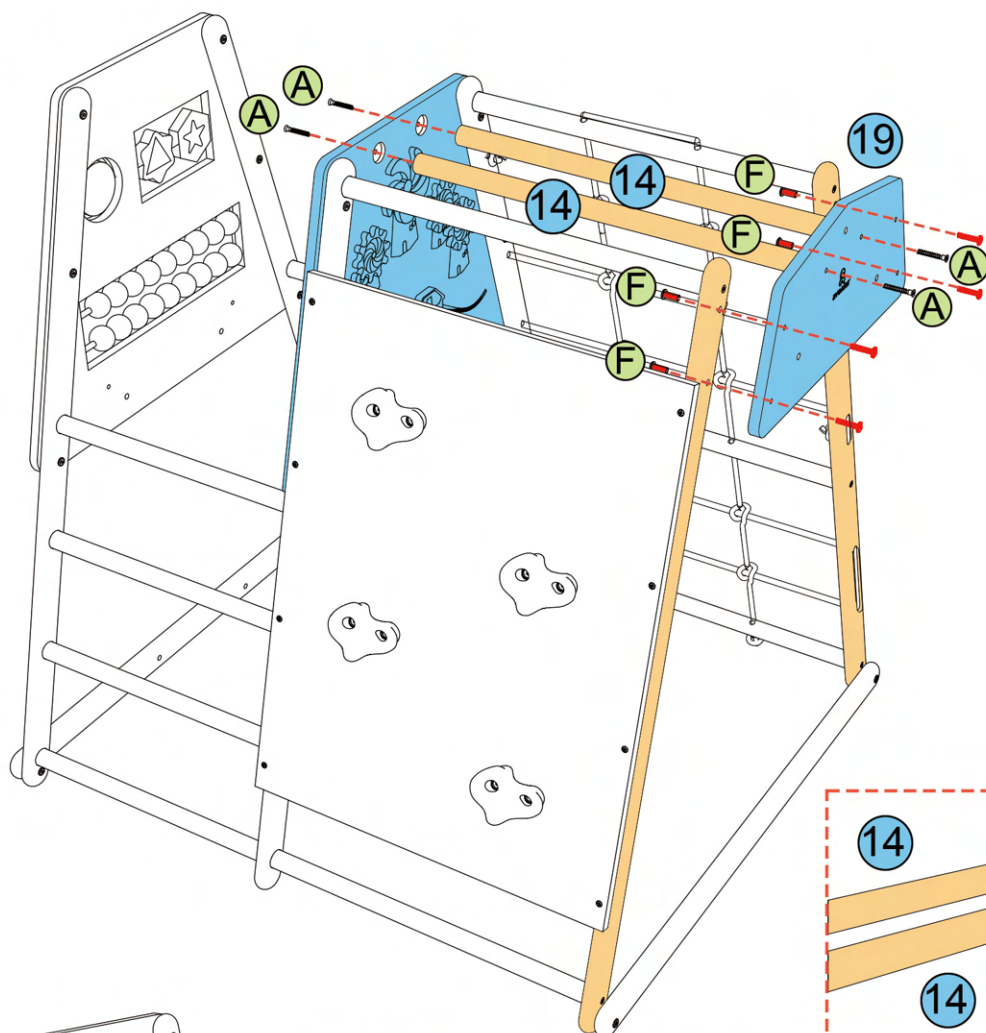



The protruding end of part 14 needs to fit inside the groove of part 19 when installing

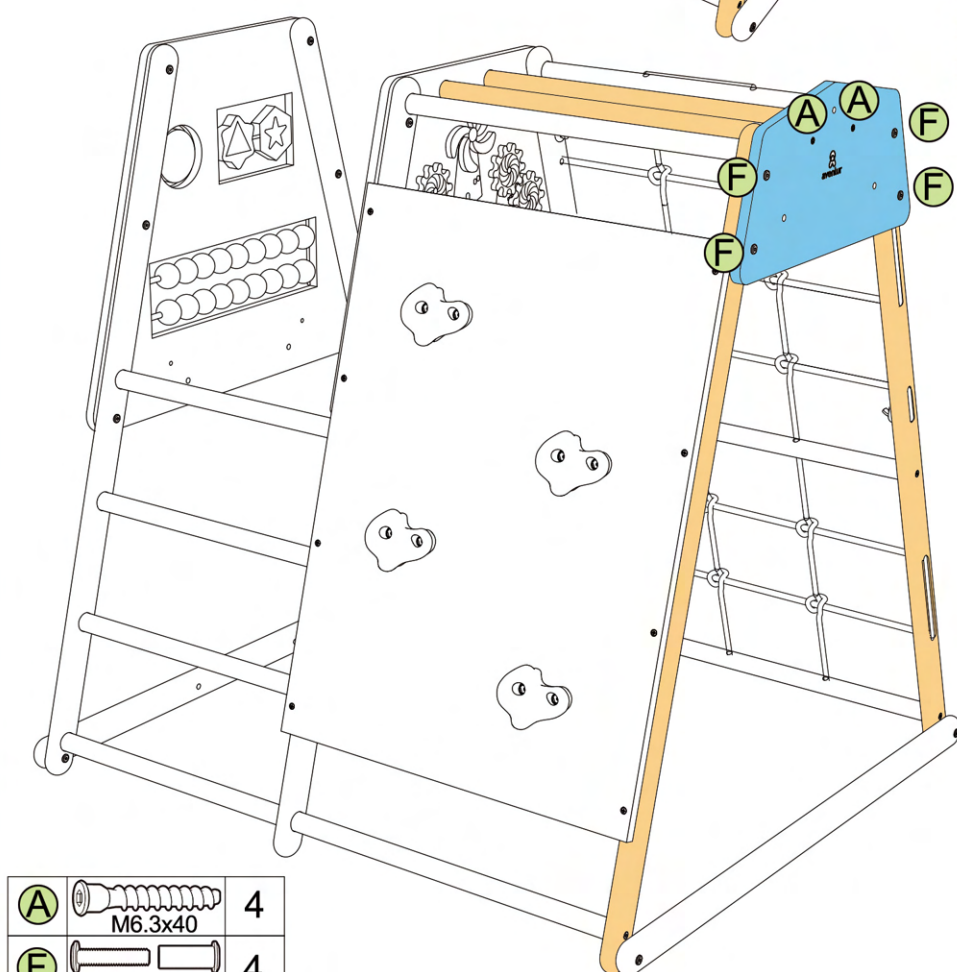


A	 M6.3x40	4
F	 M6x30 M6x20	4
L	 4mm	2

09-1


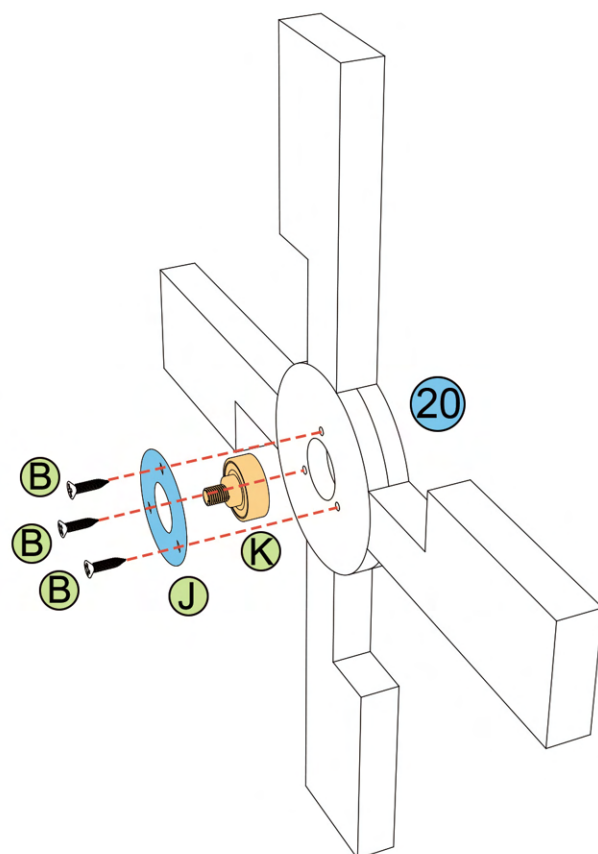


B	 M3x14	3
L	 4mm	2

09-2

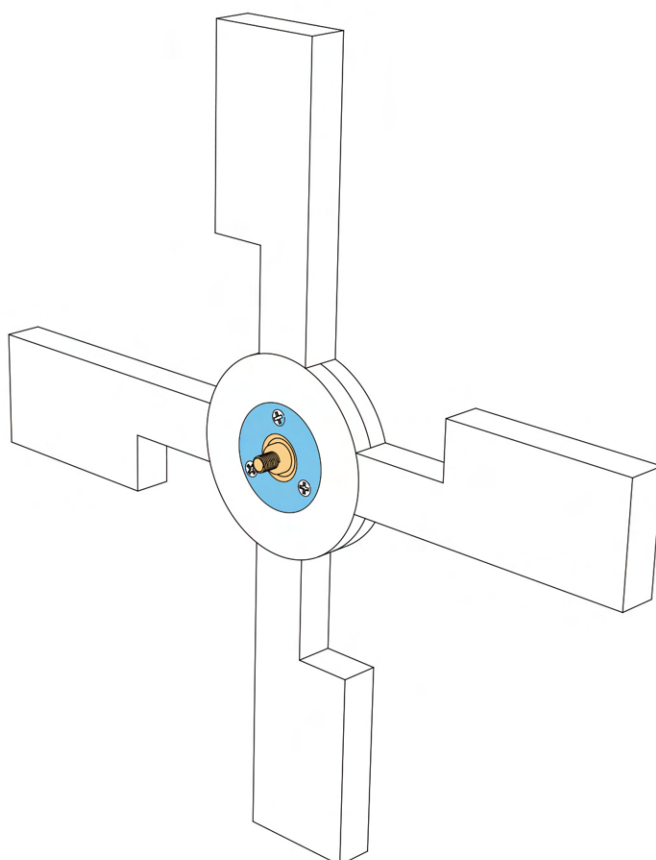


10-1

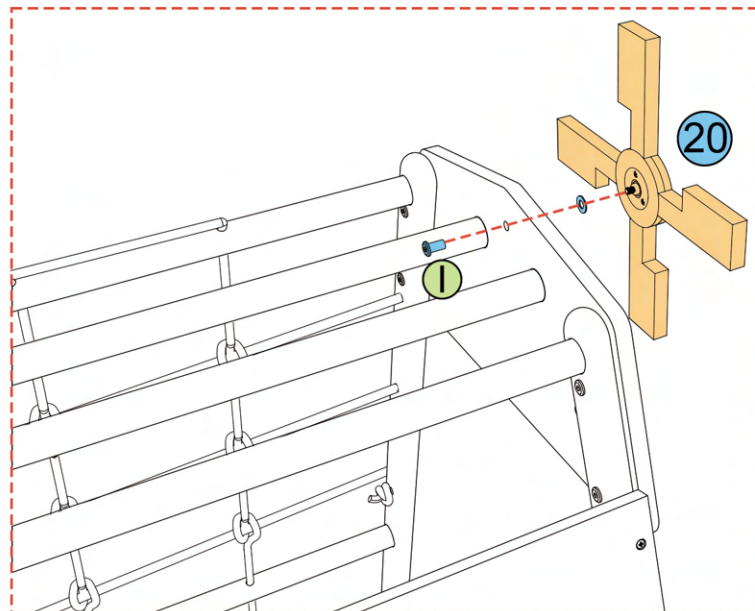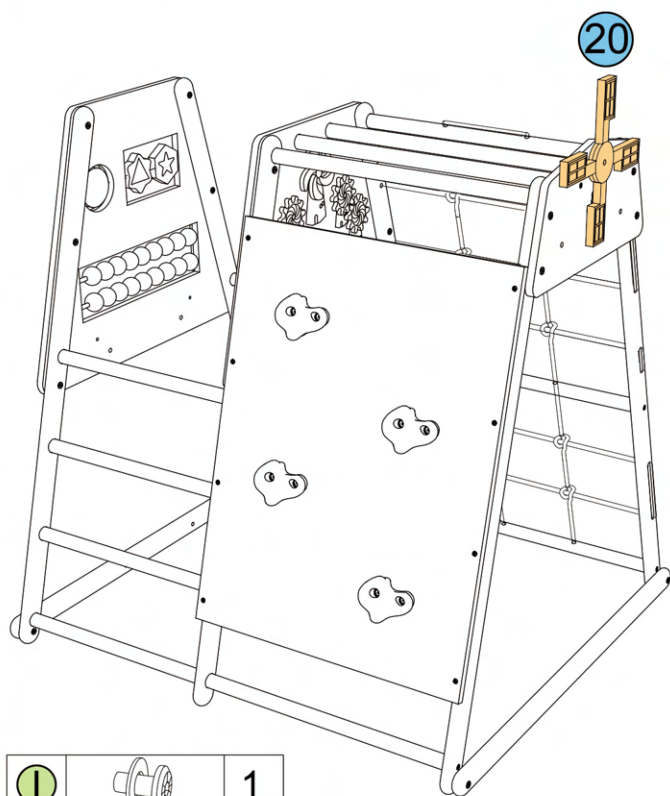




I		1
L	 4mm	2



11-1


Note: Make sure screw head indent (countersink) of 21 (the board) is facing upward

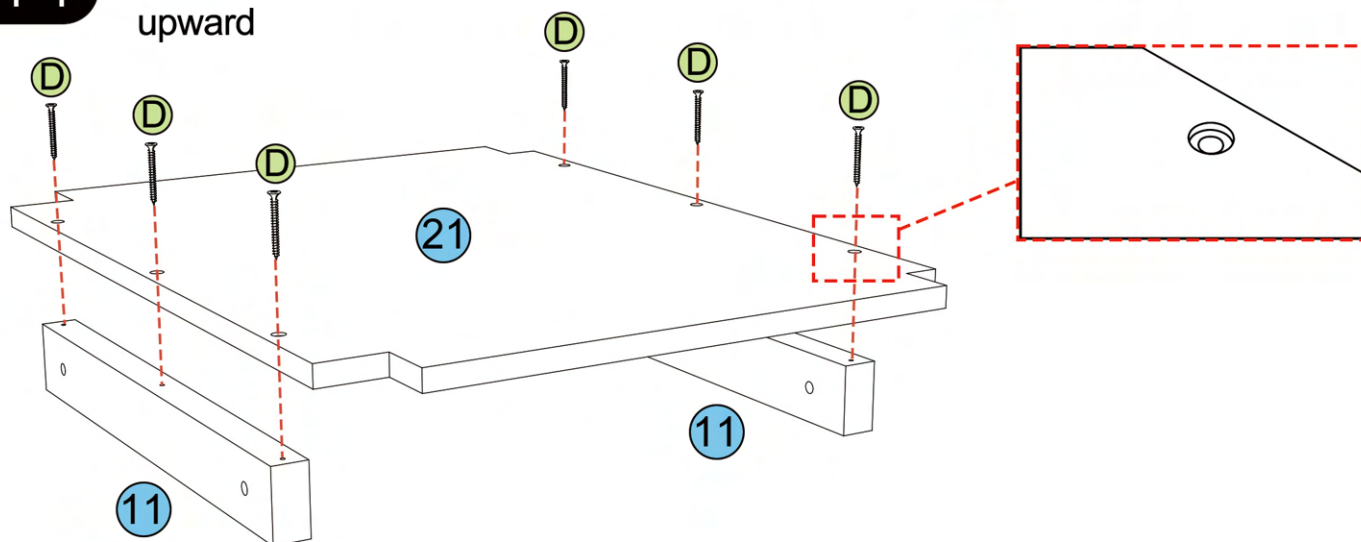


D	 M4x40	6
L	 4mm	1

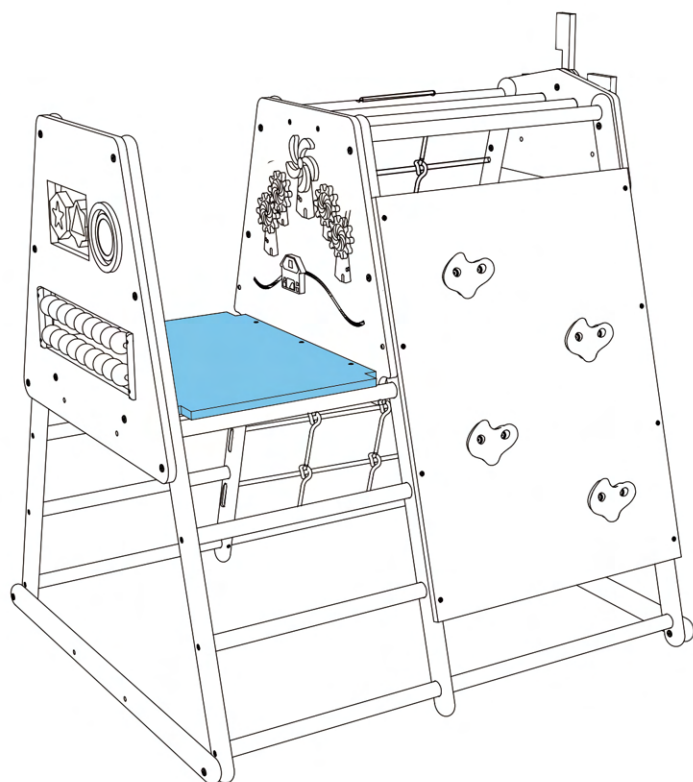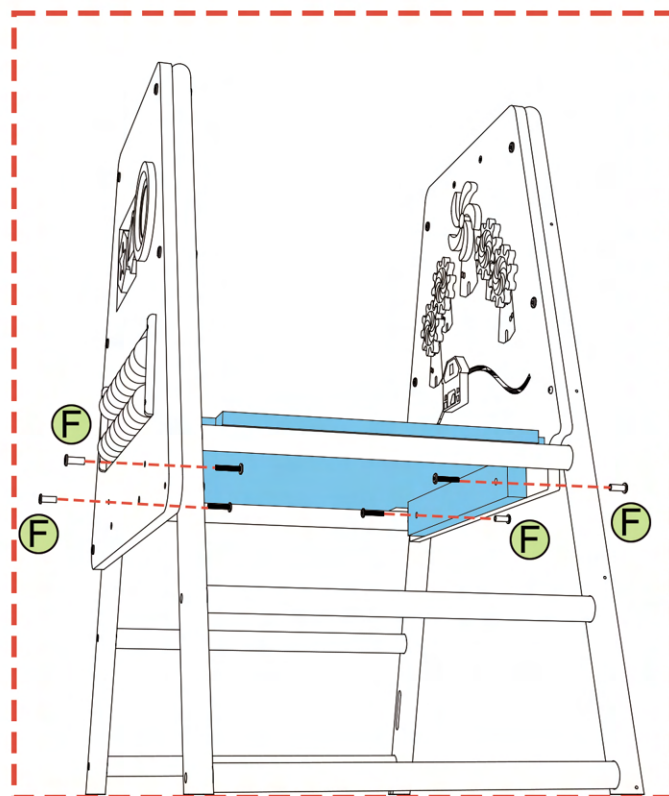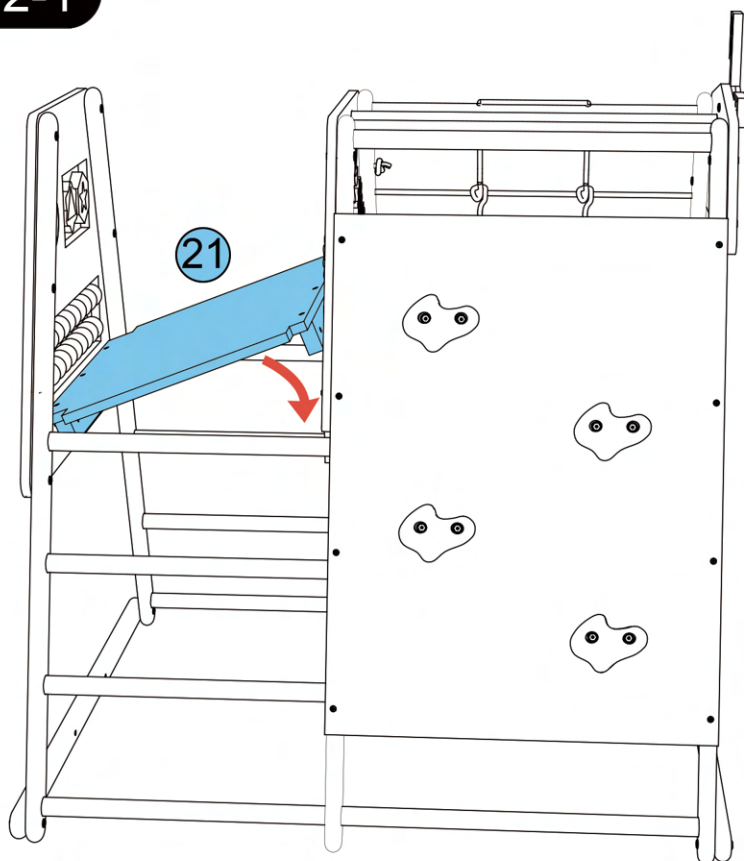


F		4
	M6x30 M6x20	
L		2
	4mm	

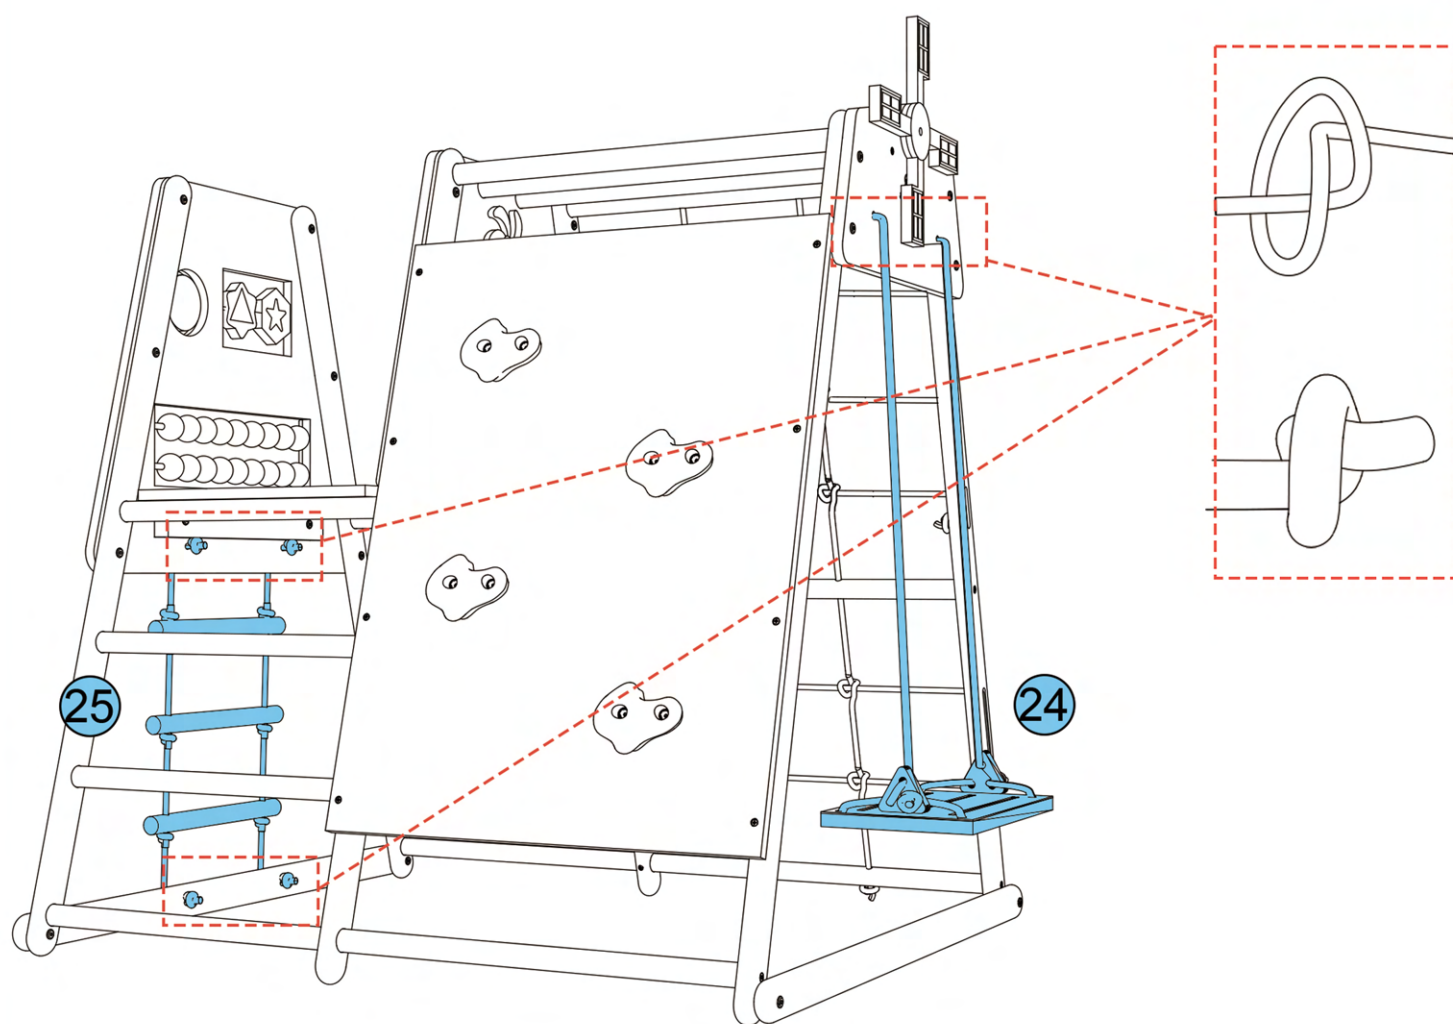


14-1

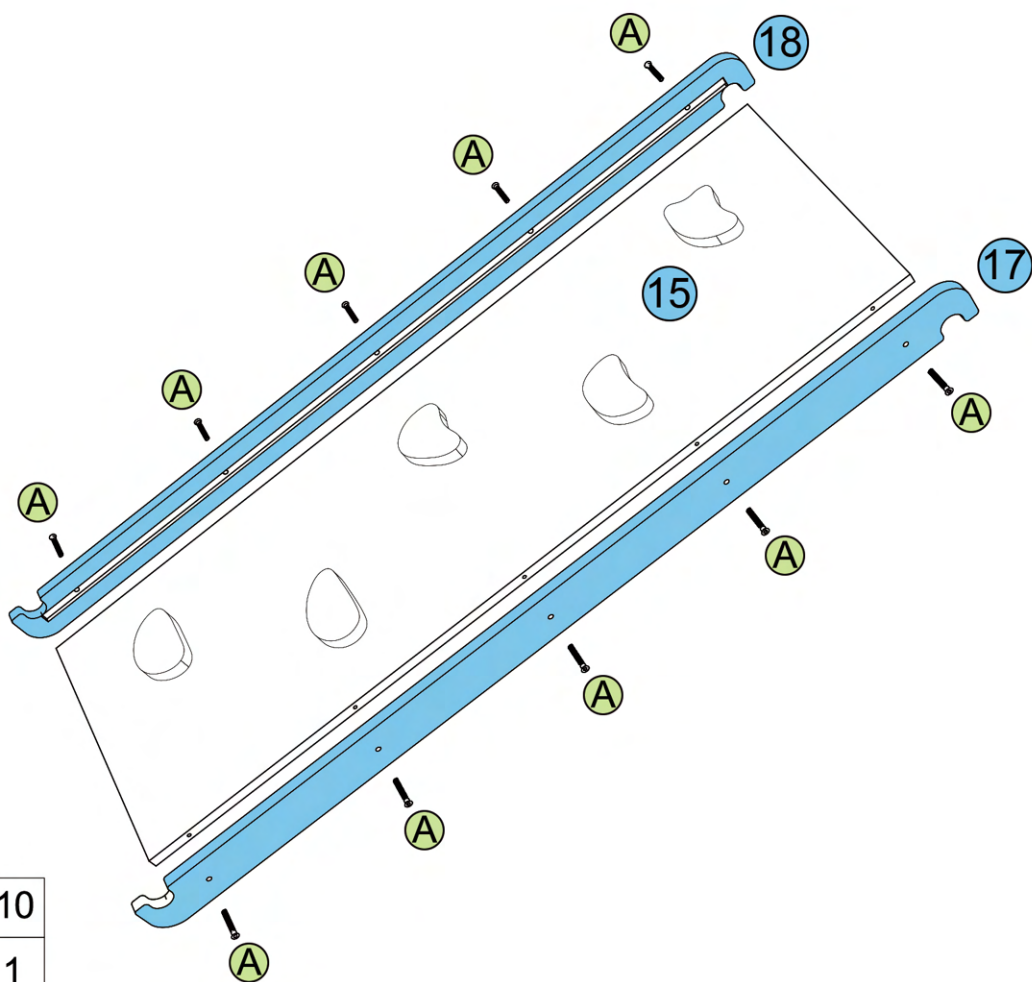

14-2

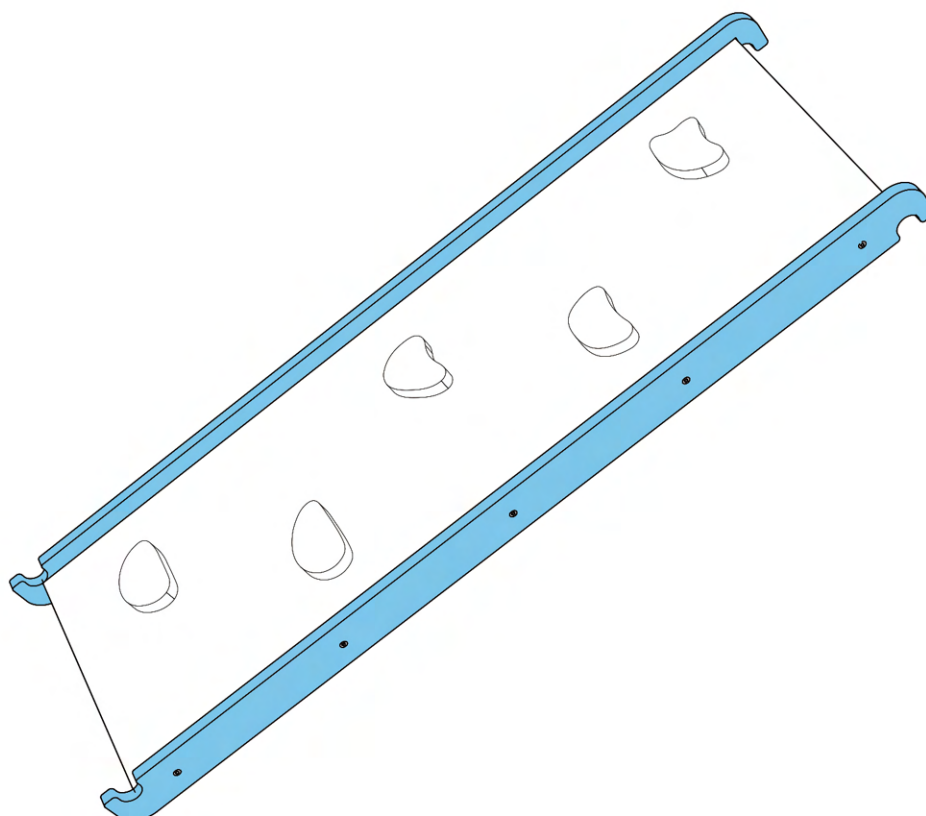

15-1

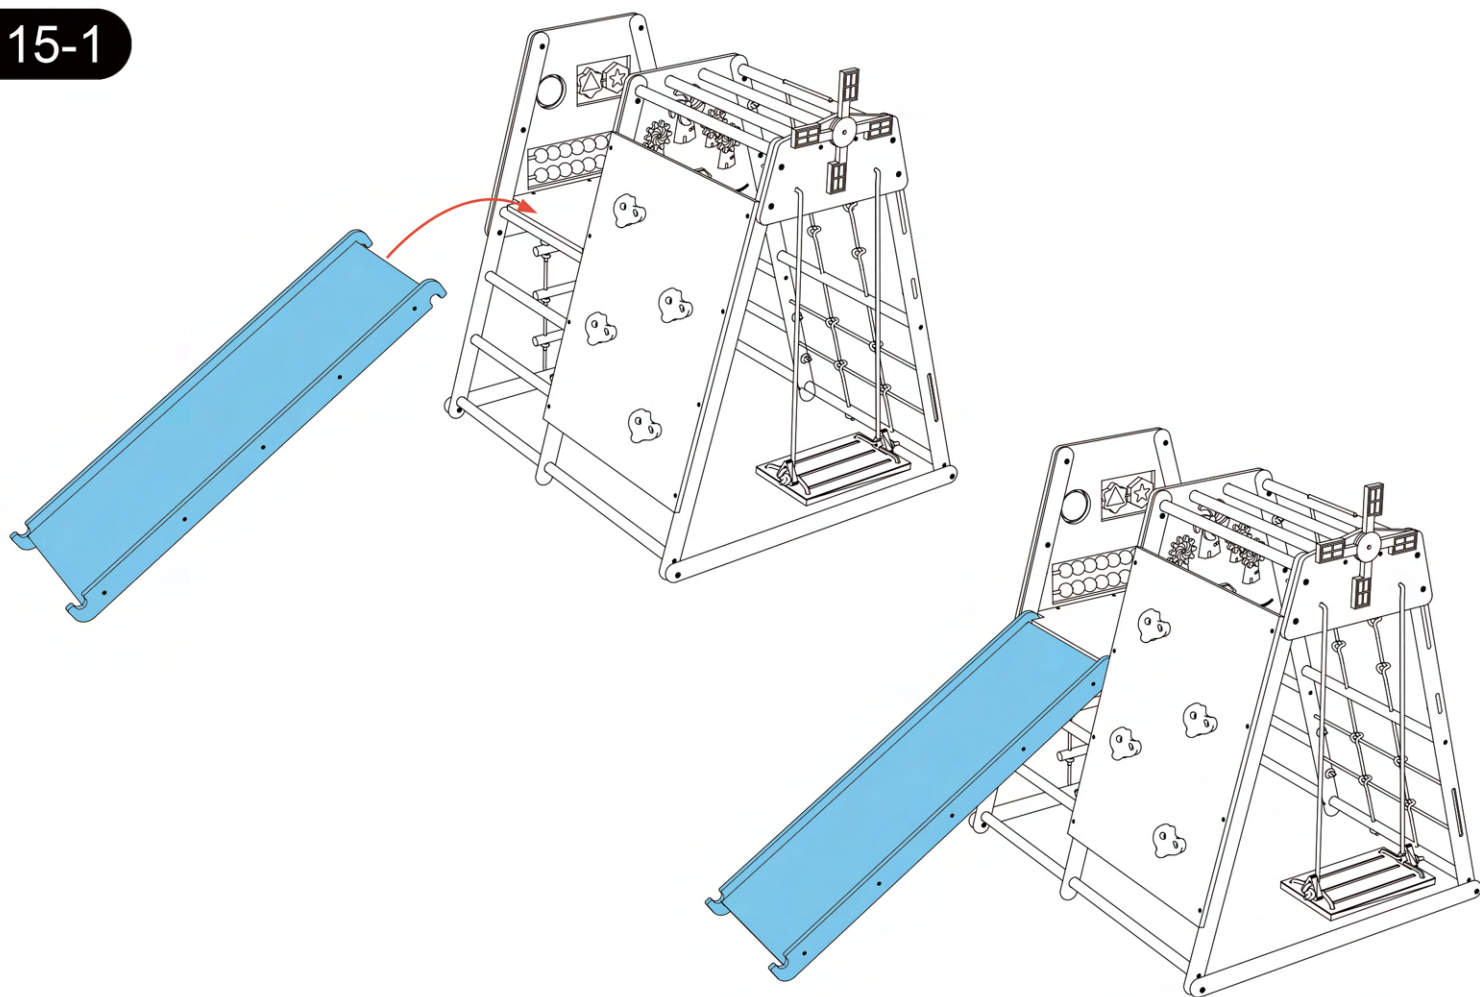

15-2

