

avenlur

Neem by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)

OR EMAIL US AT INFO@AVENLUR.COM

V2

WARNING

Adult assembly required.

WARNING

Maximum user weight: 220 lbs (100kg) per child.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY. SAVE THIS SHEET FOR FUTURE REFERENCE.

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.
2. Maximum weight per user: 220 lbs (100kg)
3. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment (examples: ropes, clothesline, pet leashes, cables and chain, etc) as they may cause a strangulation hazard or any other hazard.
4. Never allow children to use the equipment in a manner other than intended.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:


1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

CONTACT US BEFORE ASSEMBLY

If you have assembly questions or if you need parts
whether they are missing or damaged

Call us at 888-697-3931 or email us at

info@Avenlur.com

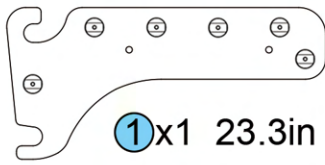

①x1 23.3in




②x6 24.4in



③x10 26.5in



④x4 25.4in

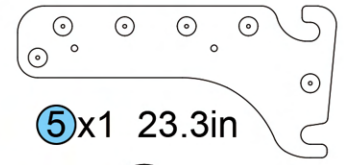

⑤x1 23.3in



⑥x2



⑦x1 39.4in



⑧x1 39.4in



⑨x1 39.4in




⑩x1 39.4in




⑪x3 56.7in




⑫x12 2in




⑬x2 45.3in

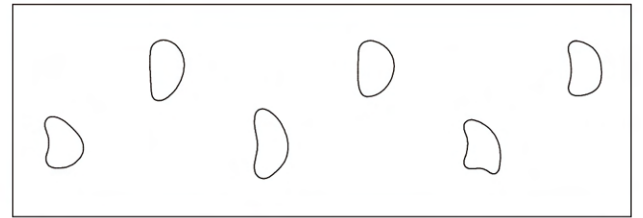

⑭x1 45.3in



⑮x1



⑯x1



⑰x2 51.2in



⑱x2 189in



⑲x1 322.8in



⑳x2 25.4in



㉑x1 39.4in



㉒x1 39.4in



㉓x1 39.4in



㉔x1 39.4in

M6.3x40

Ⓐx66

M6x120 M6x20

Ⓑx24

M8x100

Ⓒx4

M8

Ⓓx8

M8


Ⓔx8

M10x40

Ⓕx8




Ⓖx8




M6x80

Ⓖx12




4mm

Ⓖx2



13mm

Ⓖx2




M6x40 M6x20

Ⓖx6

01-1

Note: Pay attention to all the black bubbled section markers. The manual may refer back to those later

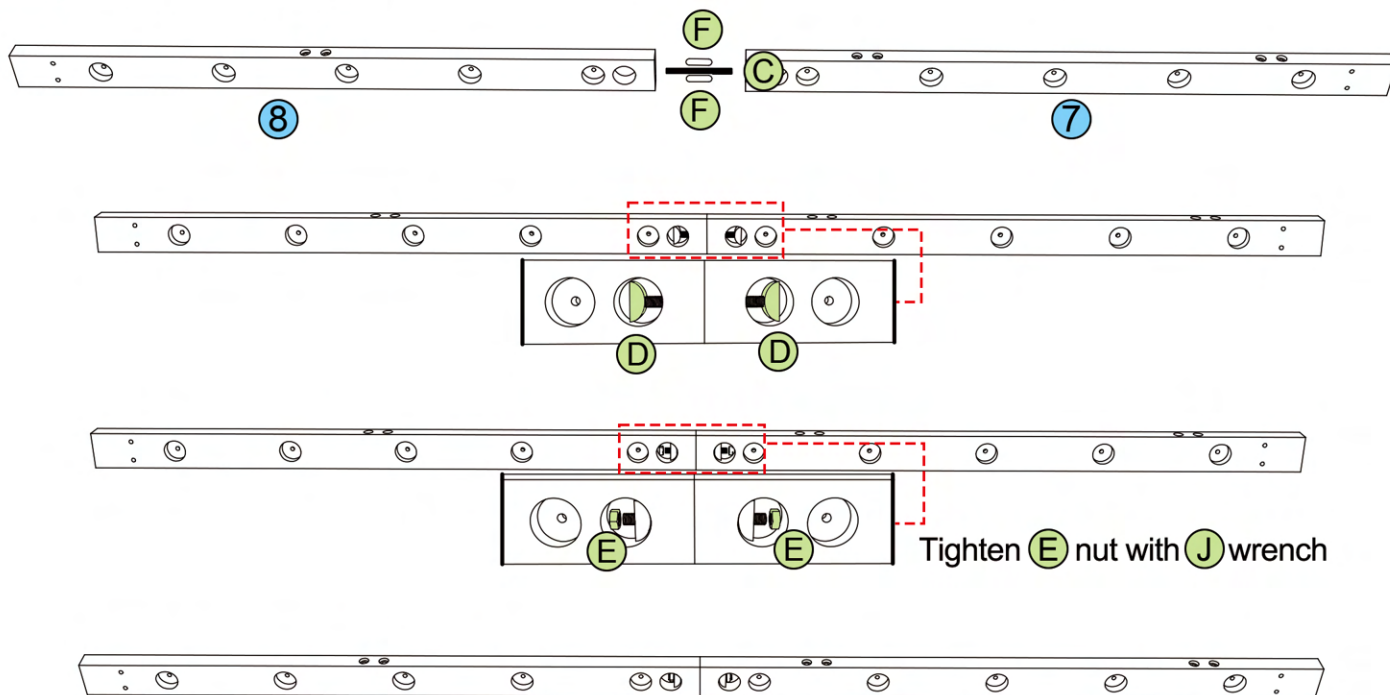


C	M8x100	1
D	M8	2

E	M8	2
F	M10x40	2

J	13mm	2
----------	------	---

02-1

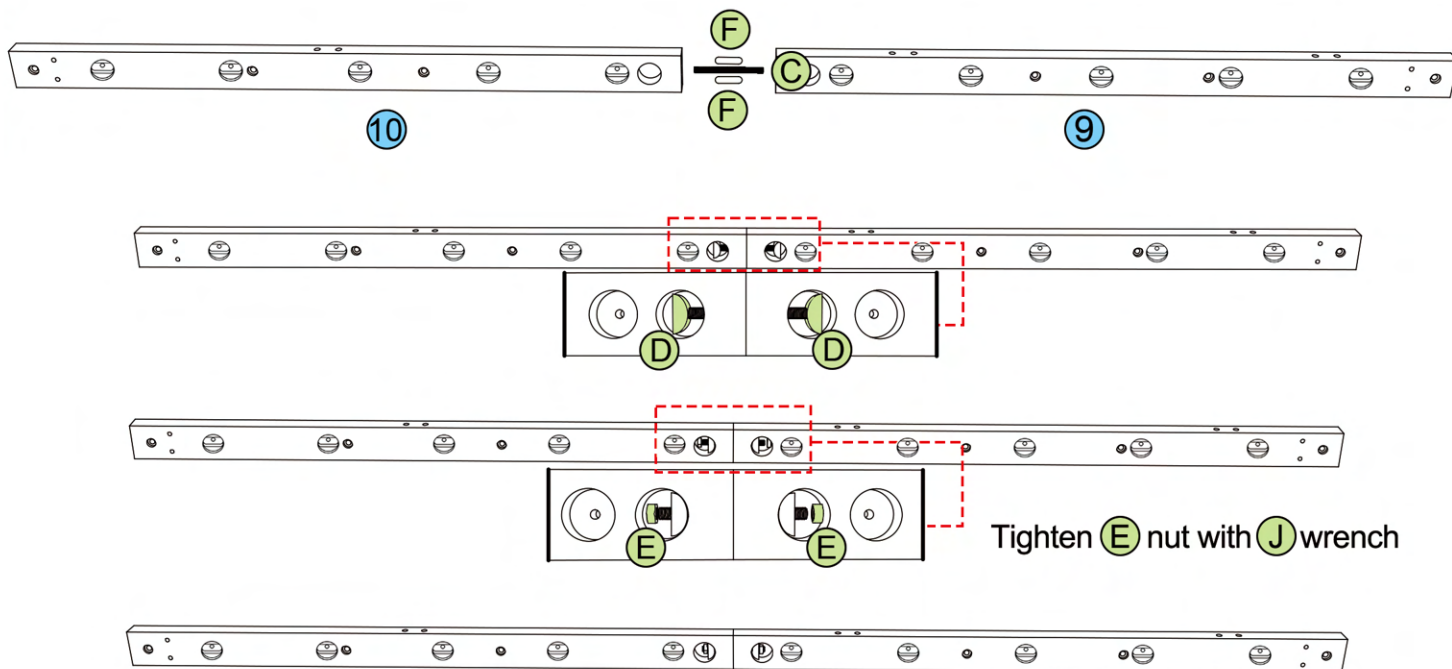


C	M8x100	1
D	M8	2

E	M8	2
F	M10x40	2


J	13mm	2
----------	------	---

03-1

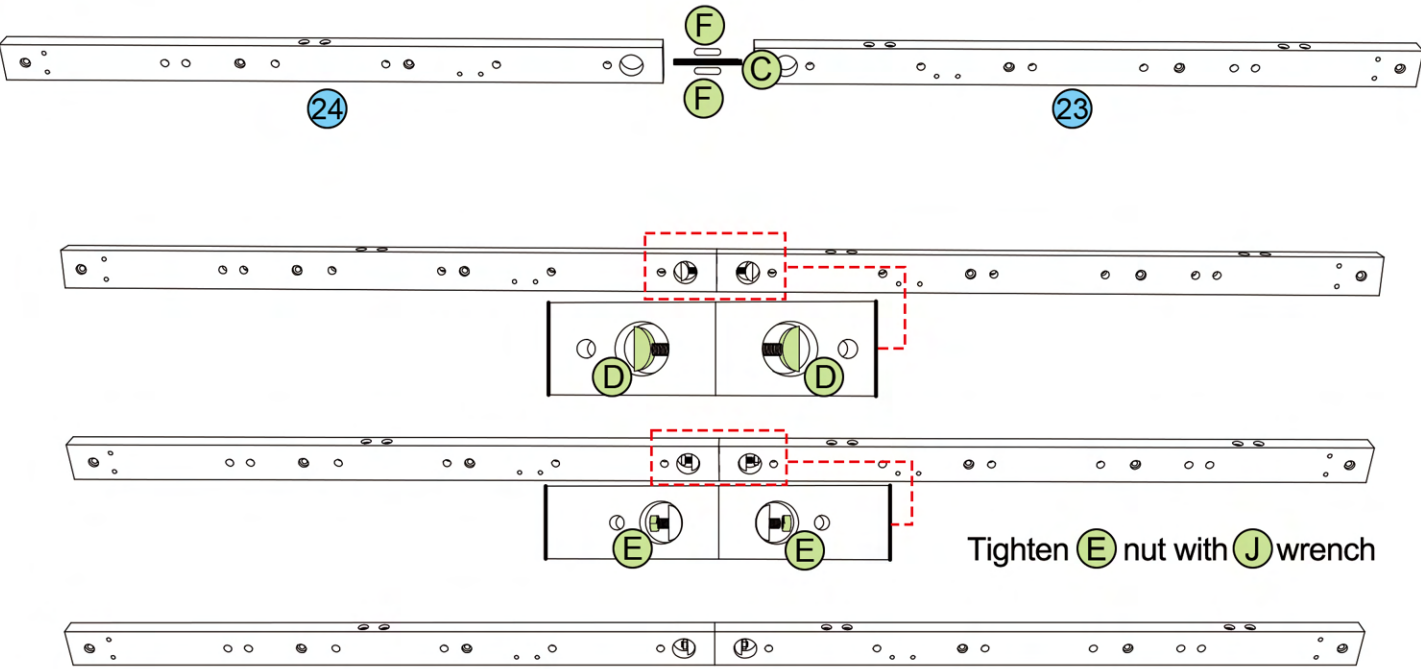


	M8x100	1		M8	2		M8	2		M10x40	2		13mm	2
--	--------	---	---	----	---	--	----	---	--	--------	---	--	------	---

04-1

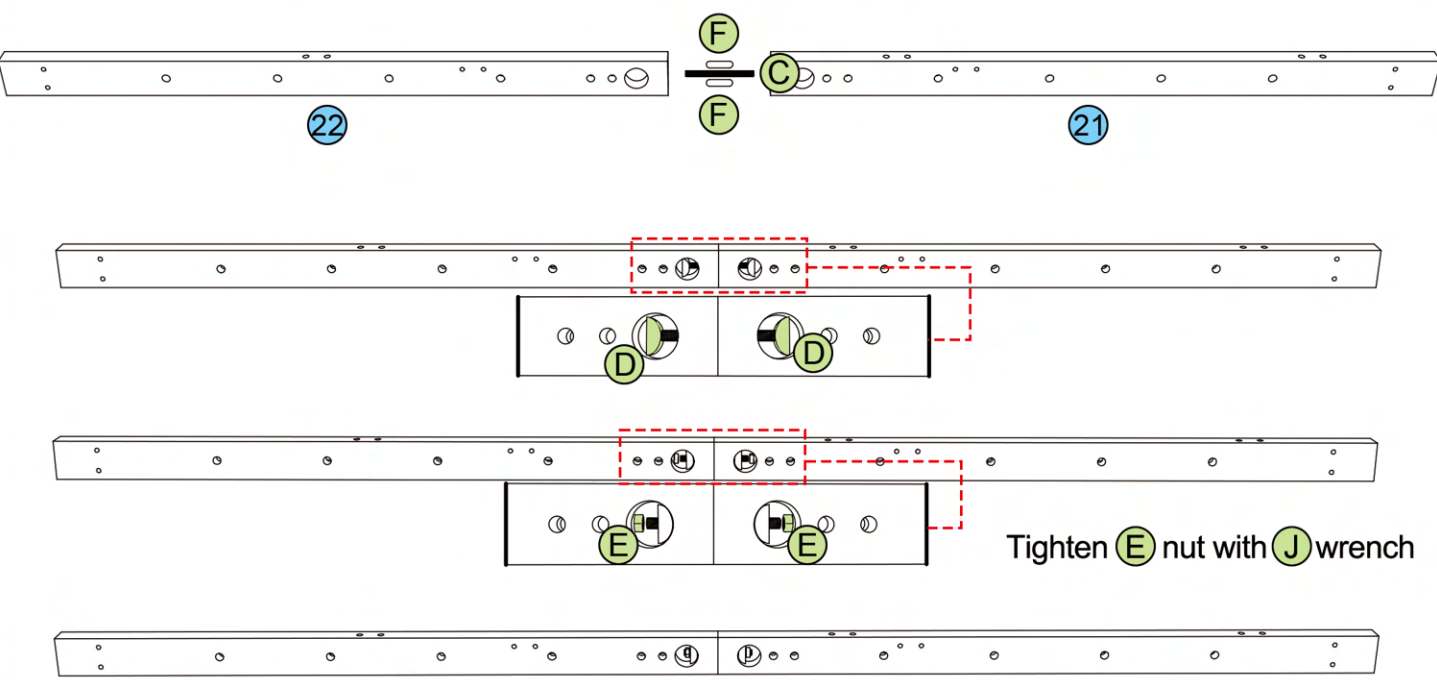


	M8x100	1		M8	2		M8	2		M10x40	2		13mm	2
--	--------	---	---	----	---	---	----	---	---	--------	---	---	------	---


Pro Tip: Using your fingers, screw in all (A) screws a little to hold everything in place before using an electric screw driver. Then using a manual screw driver, tighten each one.

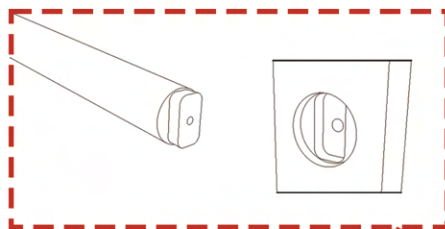




The protruding end of the part ③ need to correspond to the hole of part ⑨ and part ⑩ when installed.

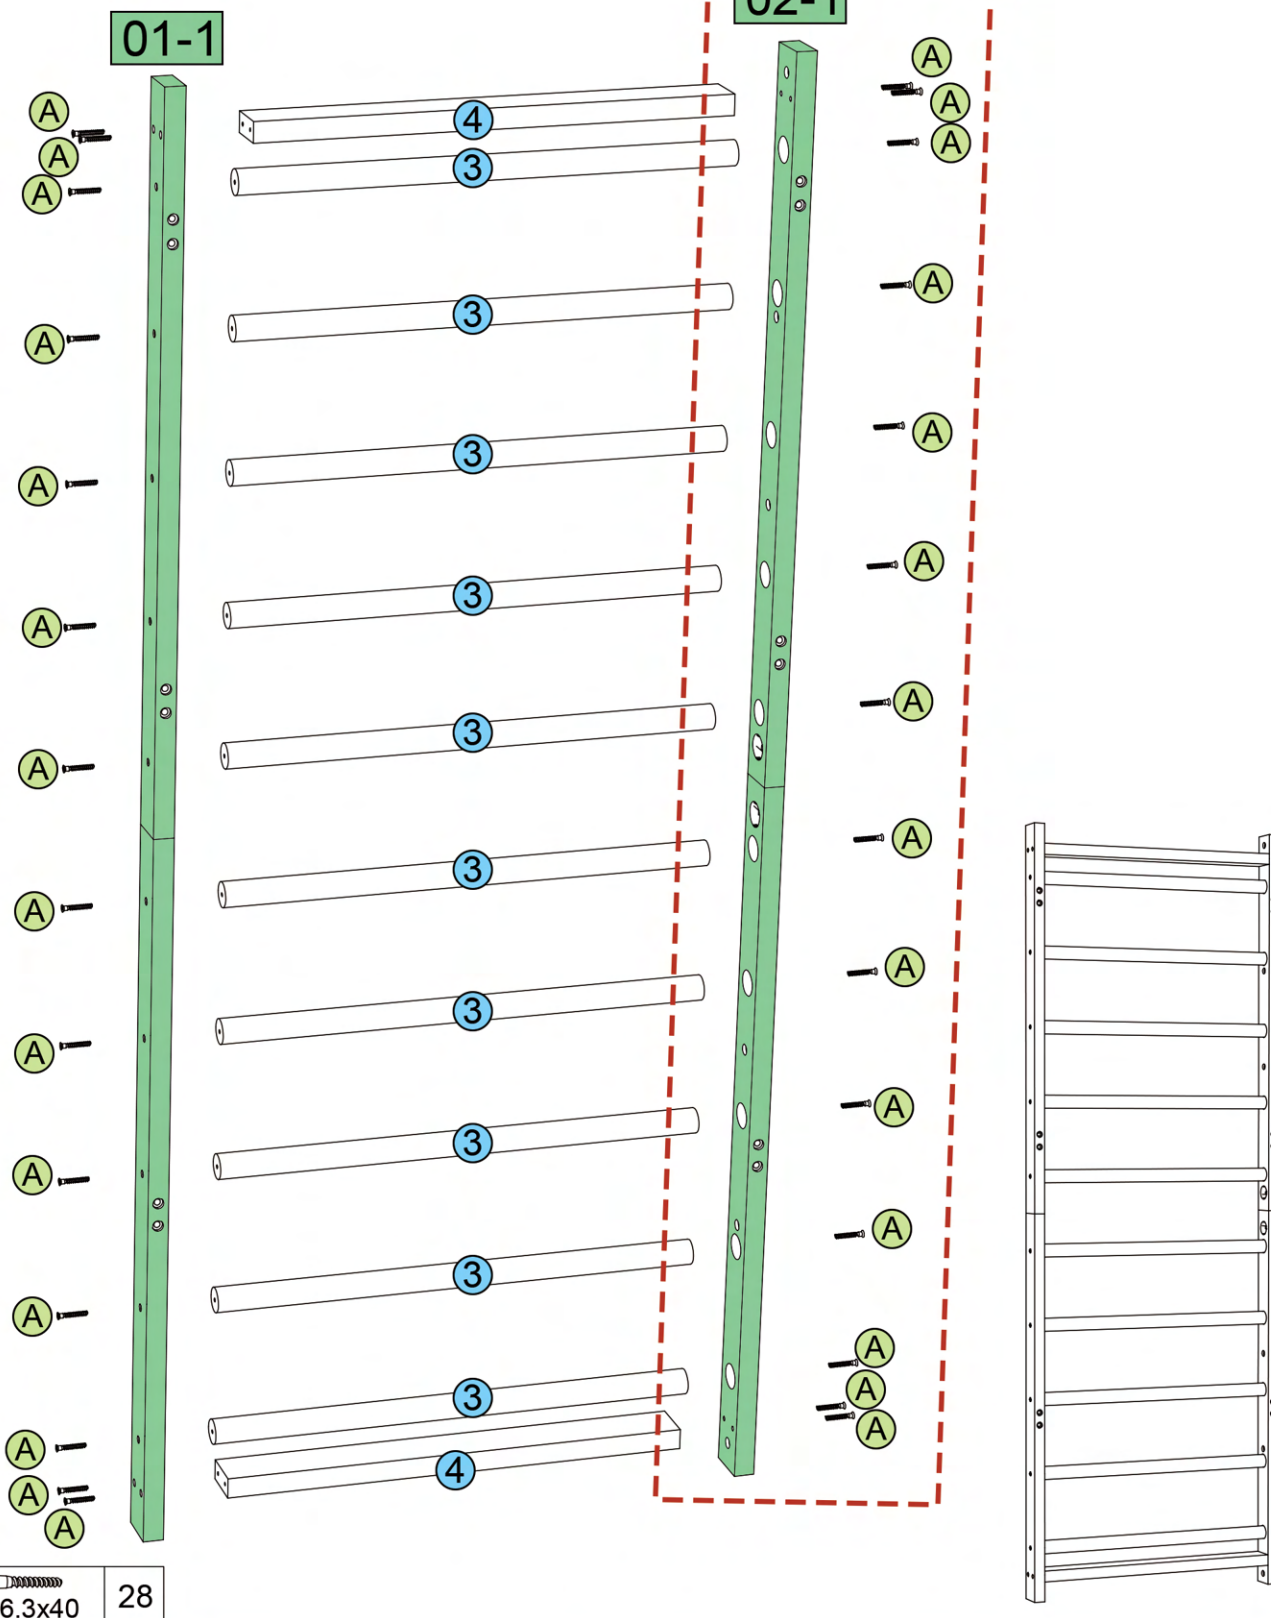

03-1





Note: The direction of the holes should be same as shown

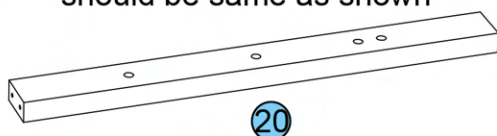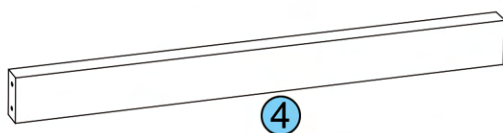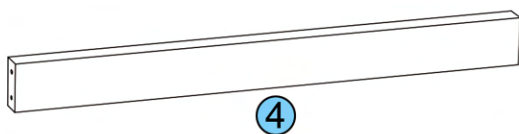

Note: The direction of the holes should be same as shown


04-1

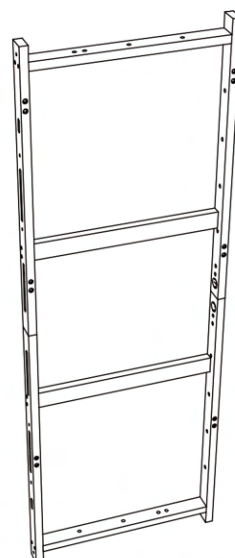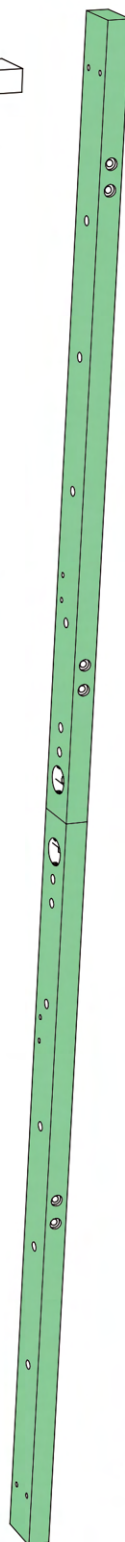


M6.3x40

16

Step 1

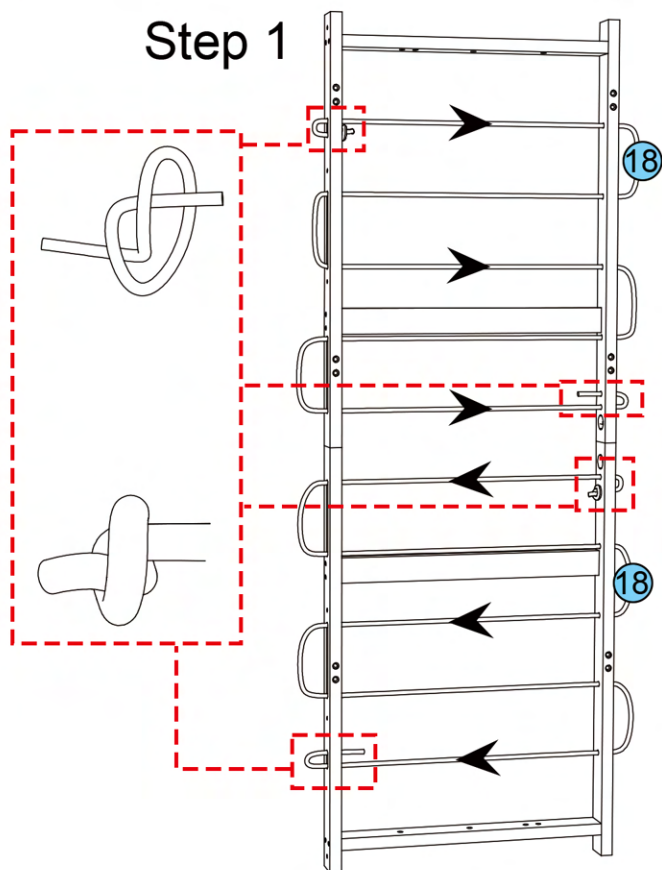


Step 2

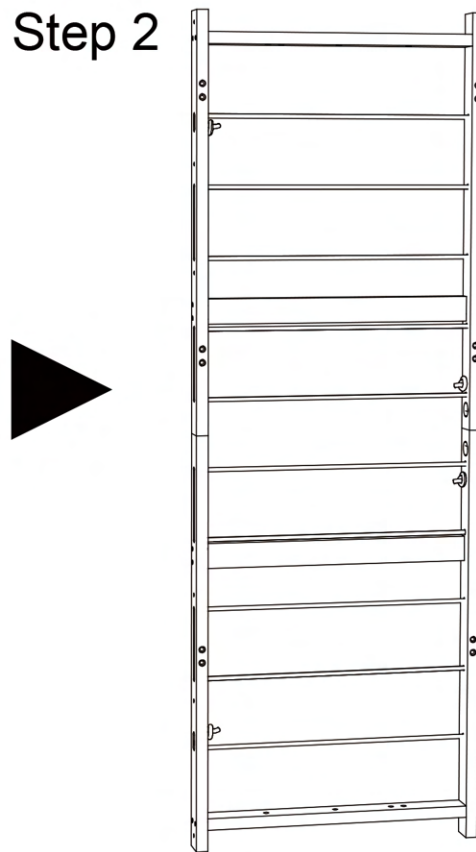




Note: The vertical rope will wrap once around each horizontal rope on each pass.



Step 3

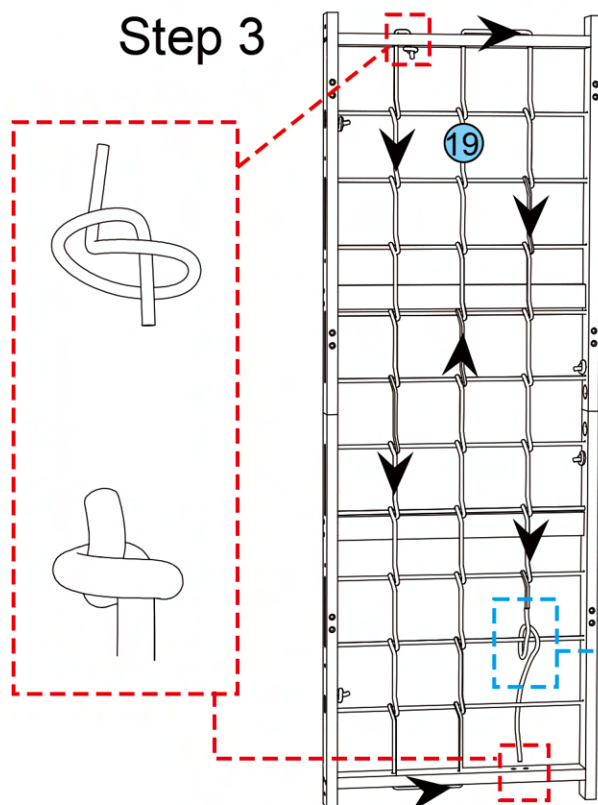


Step 4

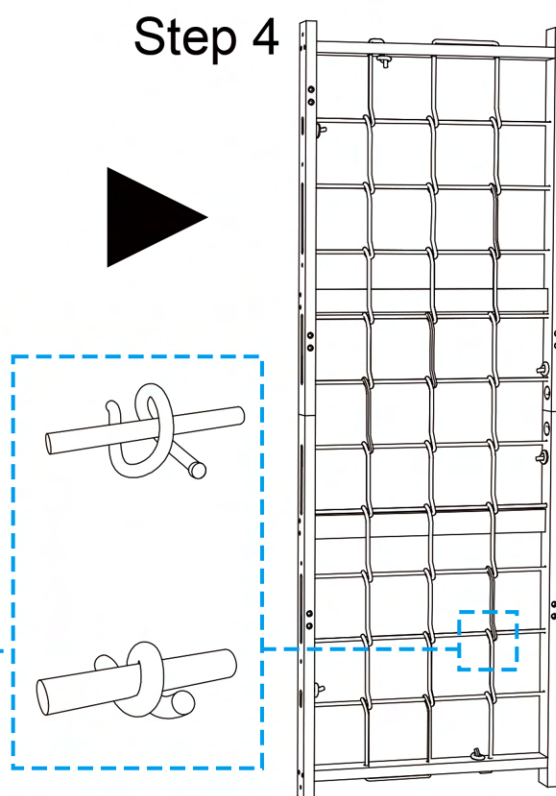

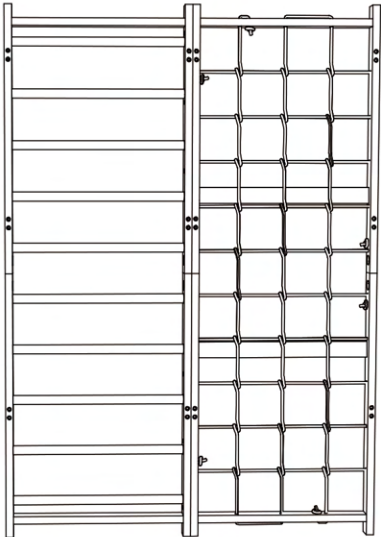
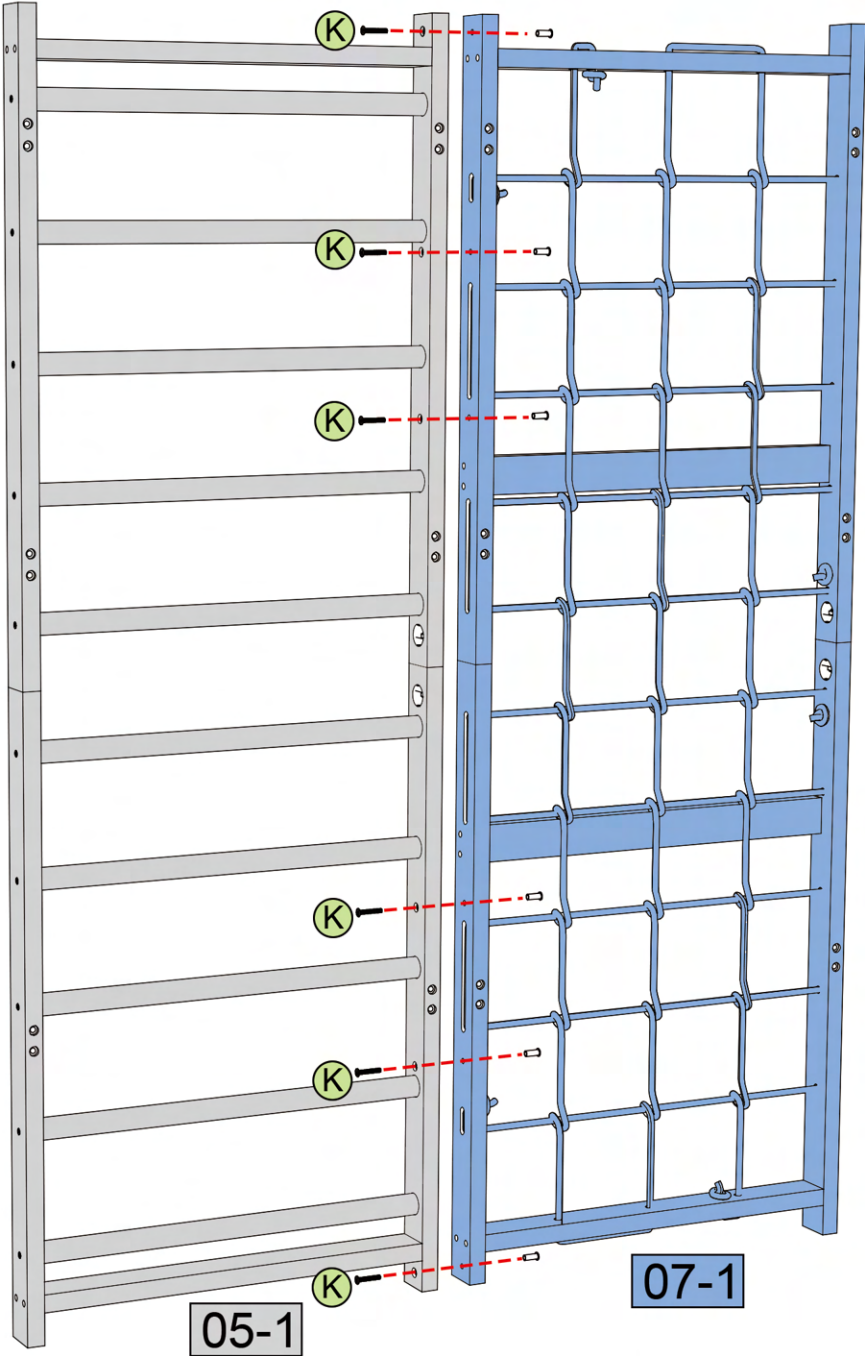


K	 M6x40 M6x20	6
J	 4mm	2

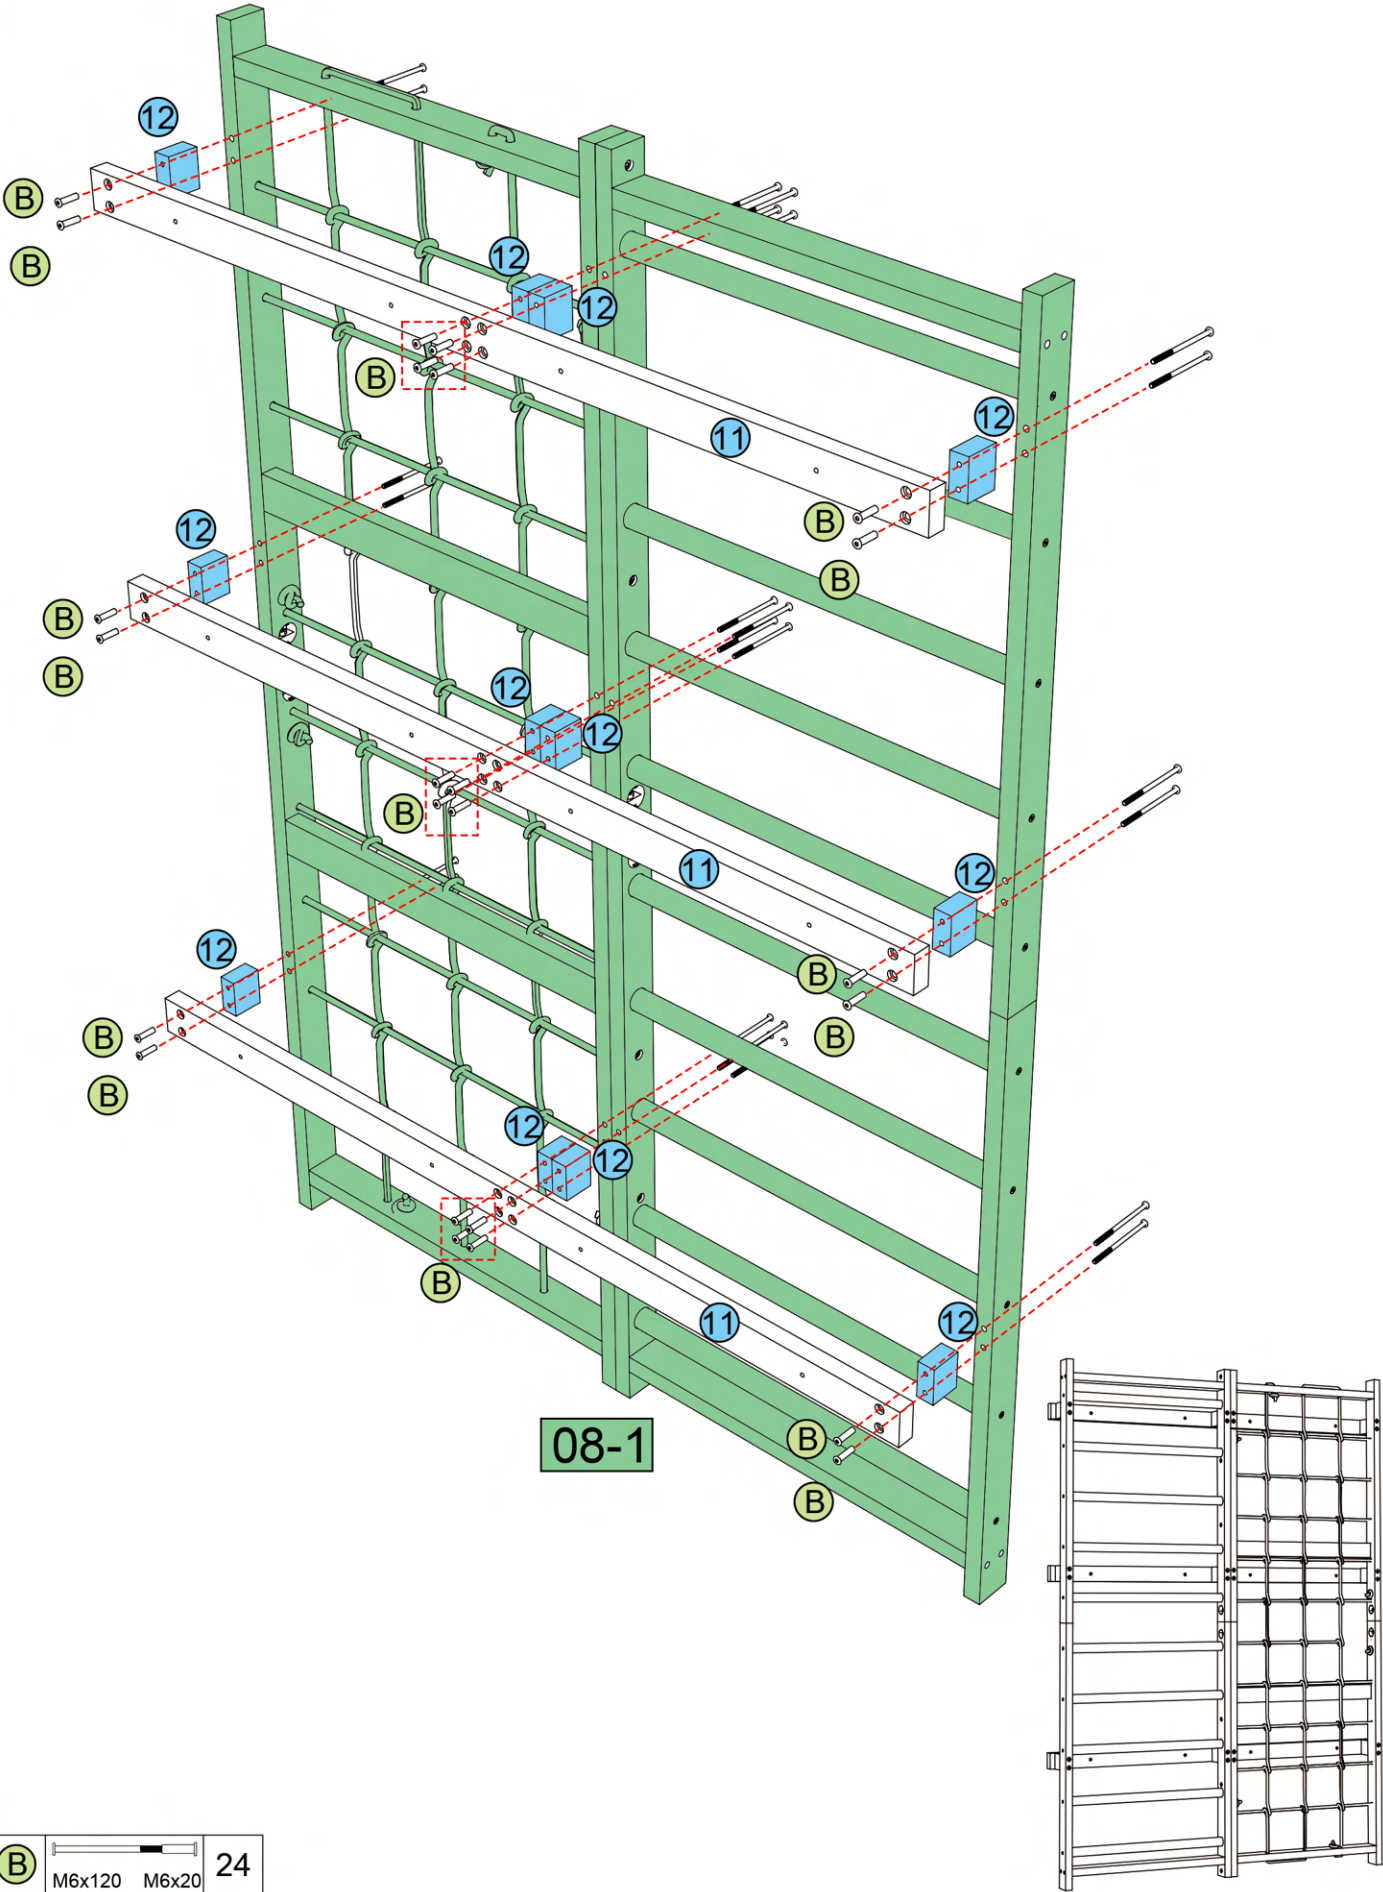


10-1

Note: Use a studfinder and mark the wall where the center of the studs are. Studs are typically 16" apart. Measure the distance between your studs to confirm. Mark, level and drill pilot holes (13/64 or 7/32 bit) in the wall before attaching parts **11** with screws **H**

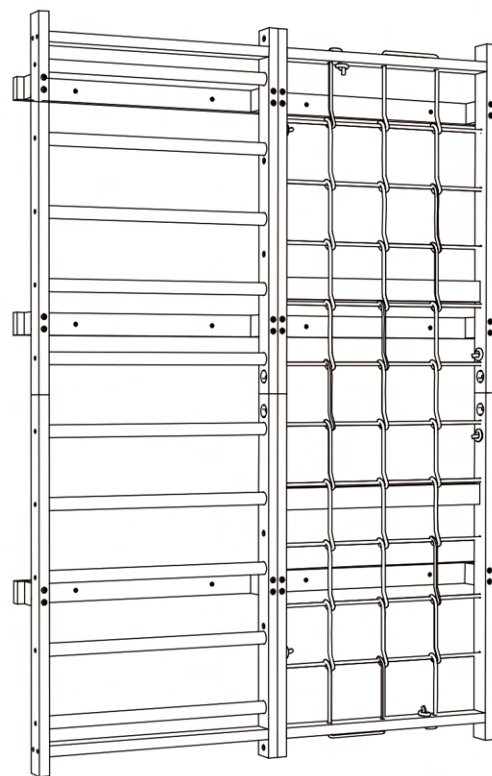
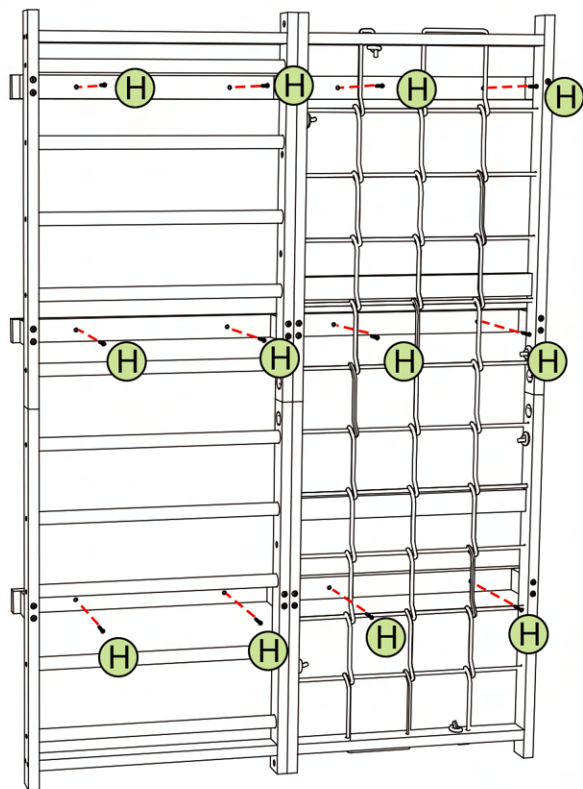


H		12
	M6x80	

11-1


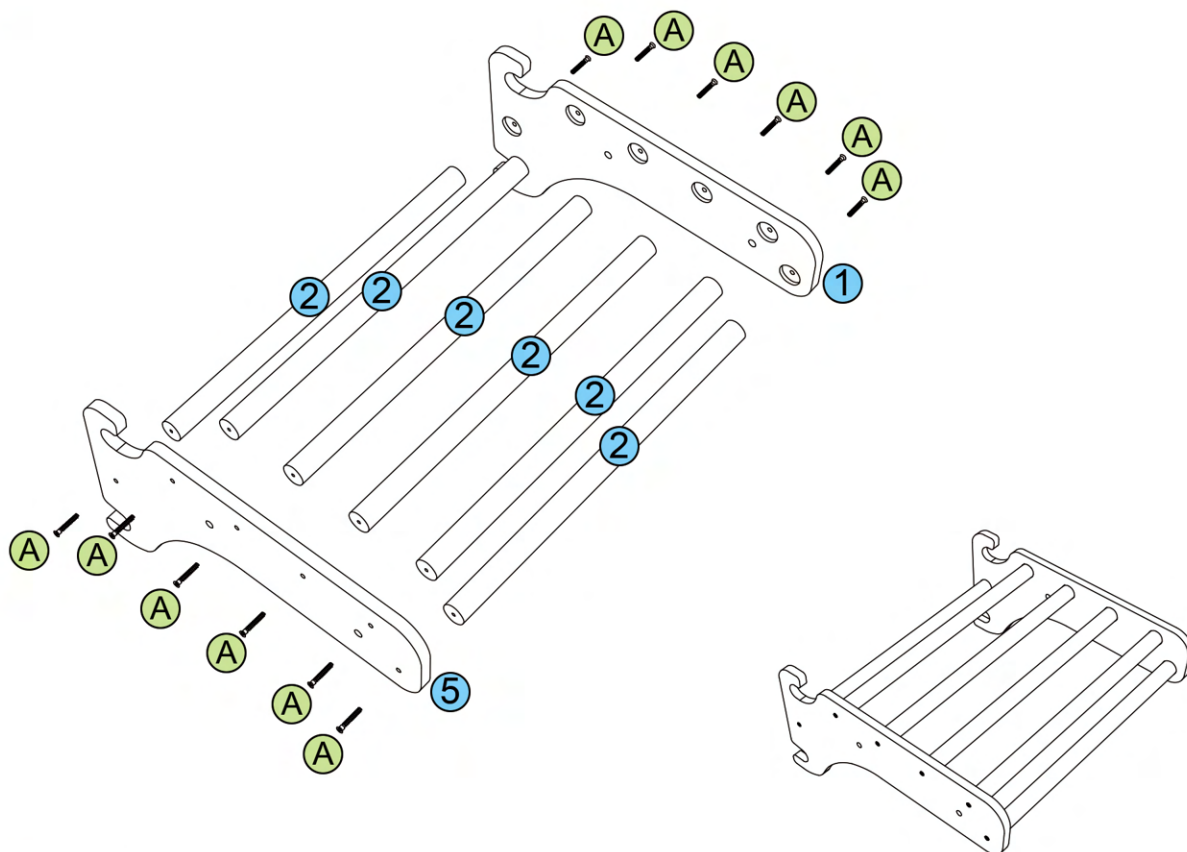



A		12
	M6.3x40	

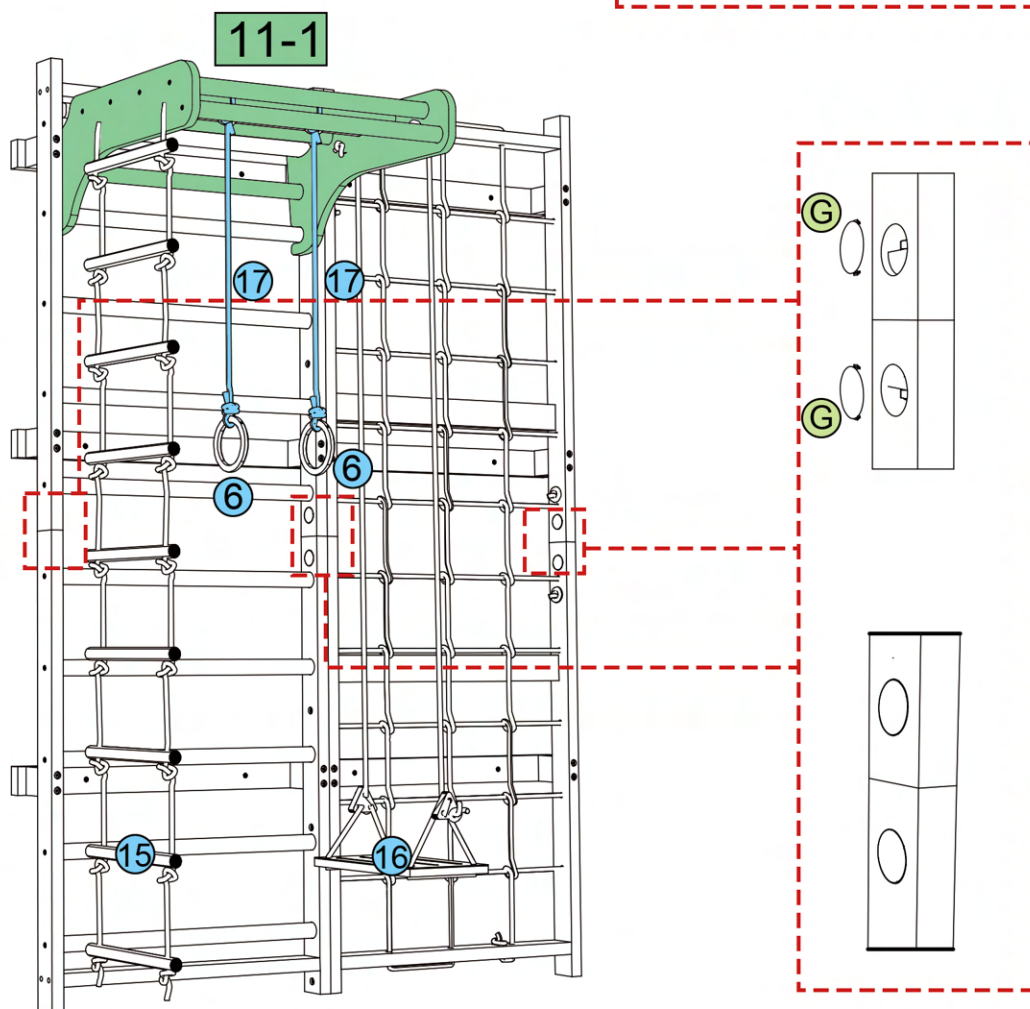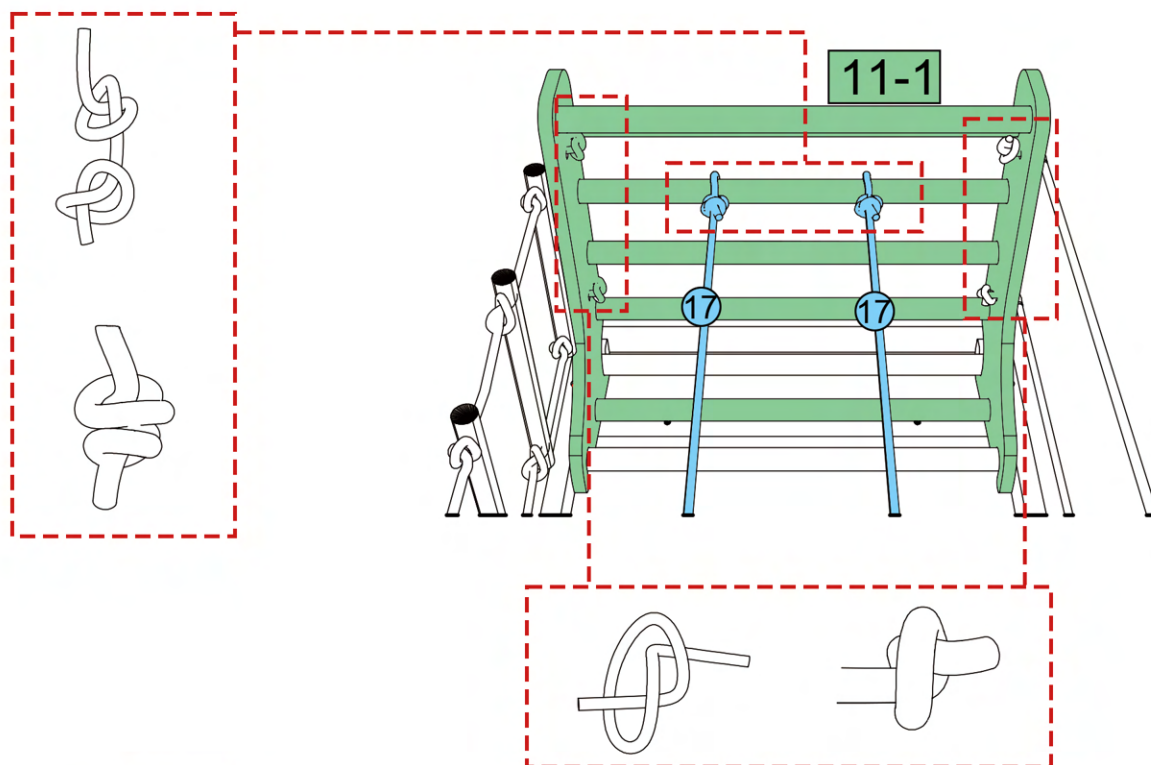

13-1

Note: Check all connections and bolts for tightness at least twice monthly during use.
Do not use if screws are loose.

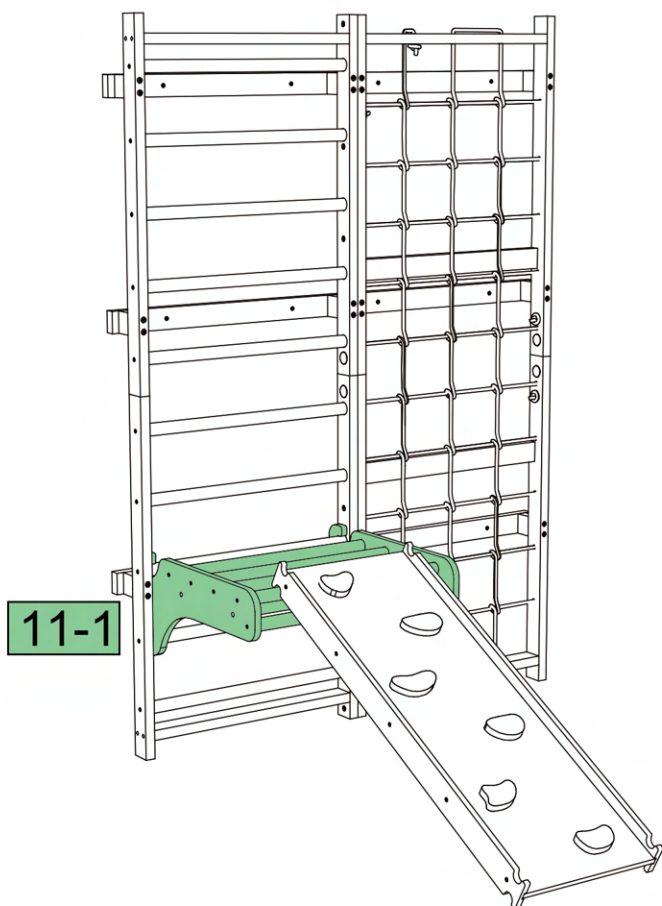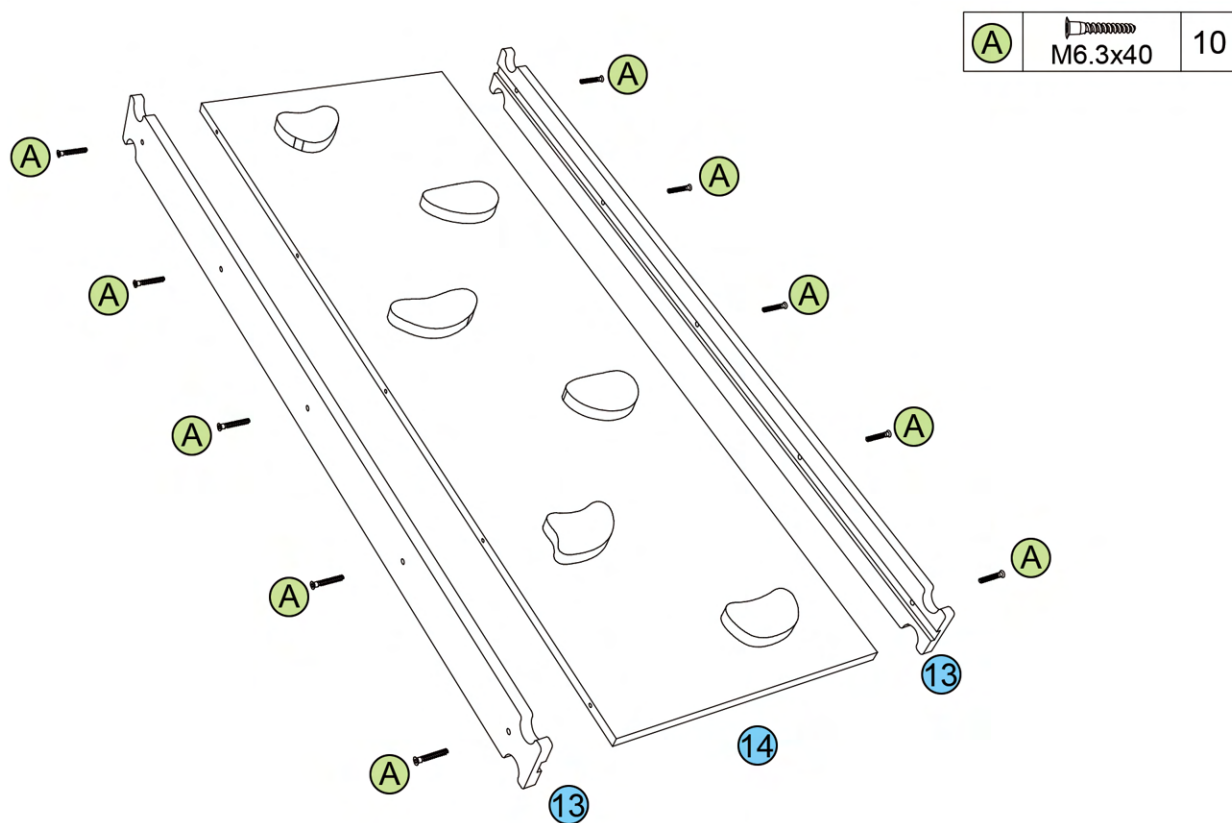

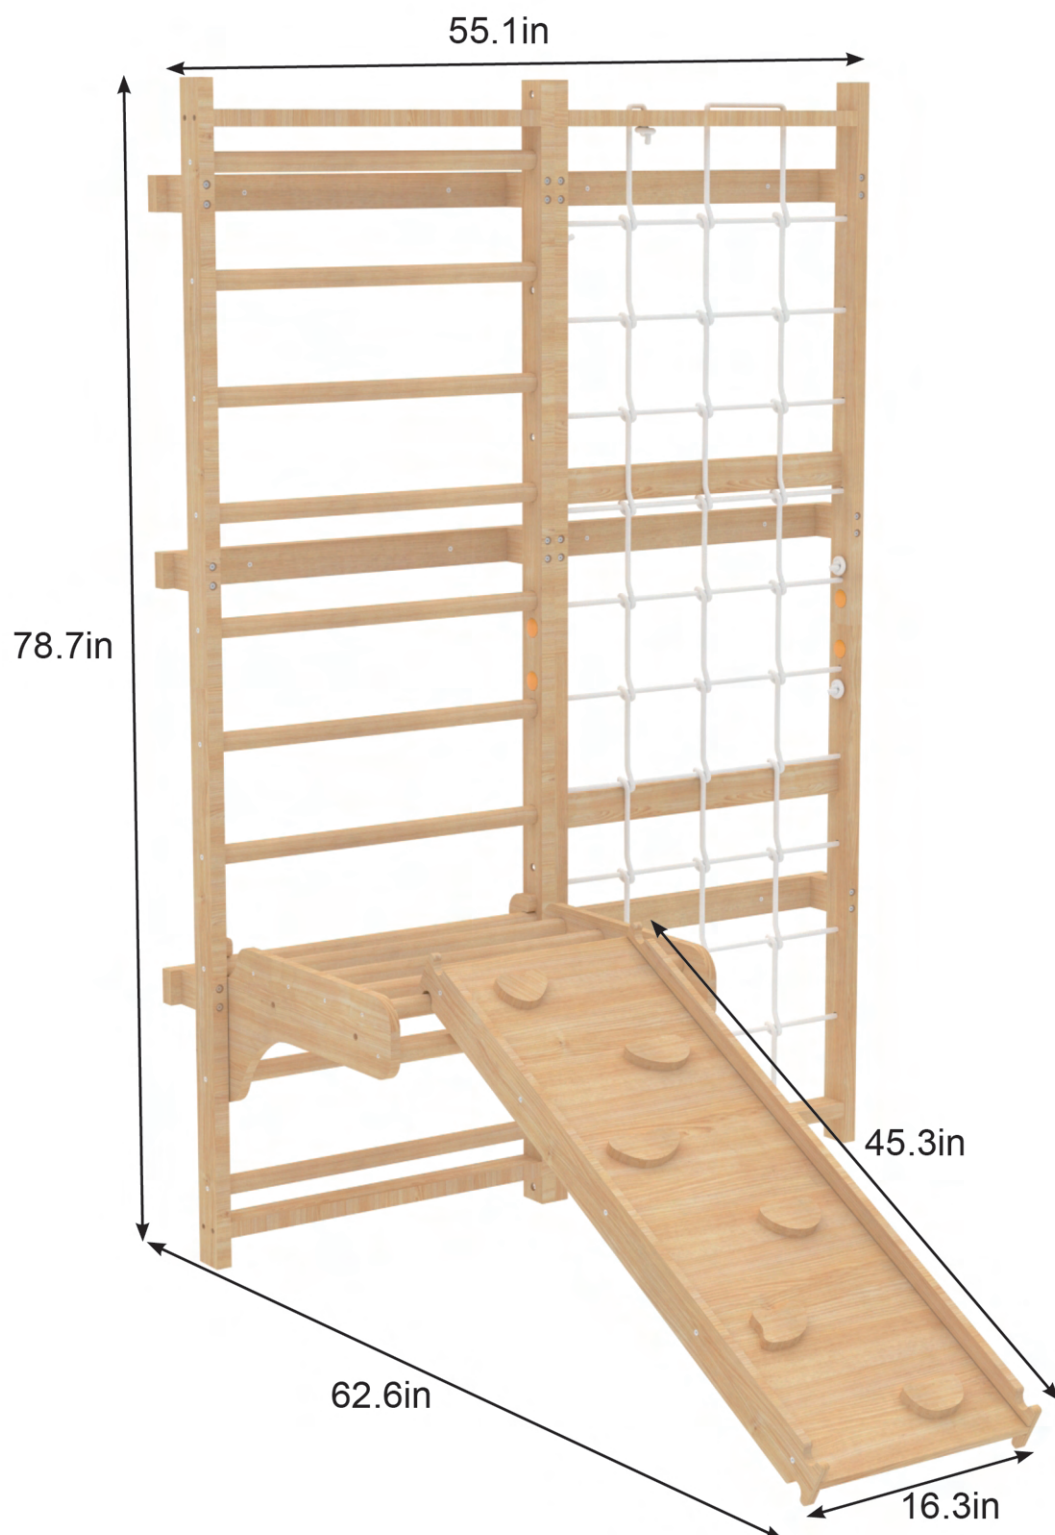

For questions with assembly or replacement parts, please email us at: info@avenlur.com or call us at: **888-697-3931**